TRANSFER CASE - NV241 (Continued)

(3) Remove the sliding clutch gear (Fig. 31) from the mainshaft.

(4) Rotate the mainshaft 180° and remove the mode hub snap-ring (Fig. 32).

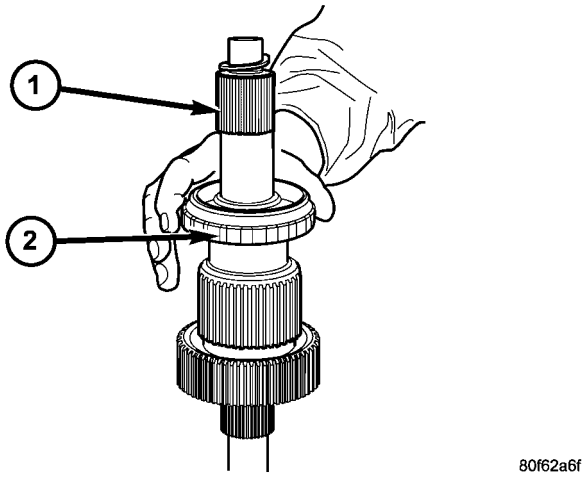

Fig. 31 Sliding Clutch Gear Removal

1 - MAINSHAFT
2 - SLIDING CLUTCH GEAR

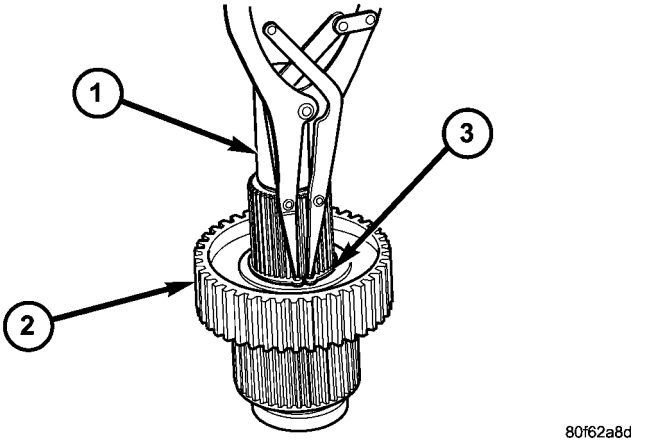

Fig. 32 Mode Hub Snap-Ring Removal

1 - MAINSHAFT
2 - MODE HUB
3 - SNAP-RING

(5) Remove the mode hub (Fig. 33) from the mainshaft.

(6) Remove the drive sprocket drive hub (Fig. 34) from the mainshaft.

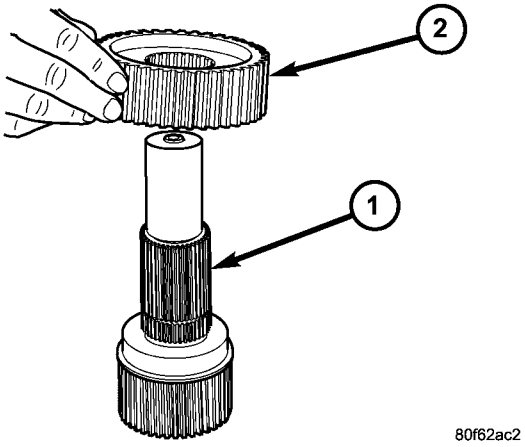

Fig. 33 Mode Hub Removal

1 - MAINSHAFT
2 - MODE HUB

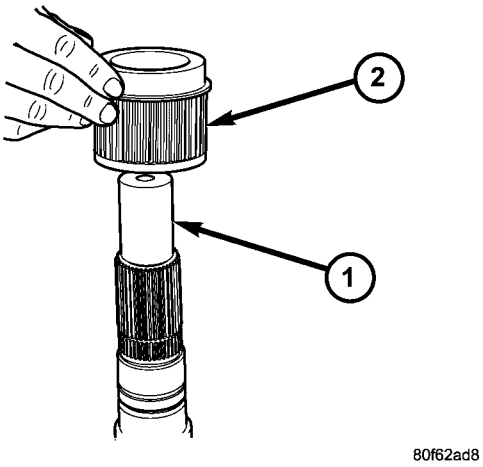

Fig. 34 Drive Sprocket Drive Hub Removal

1 - MAINSHAFT
2 - DRIVE SPROCKET DRIVE HUB