TRANSFER CASE - NV241 (Continued)

(6) Remove the low range planetary plastic spacer (Fig. 39) from the planetary carrier or back side of the input retainer.

(7) Remove the low range planetary gear set (Fig. 40) from the front case half.

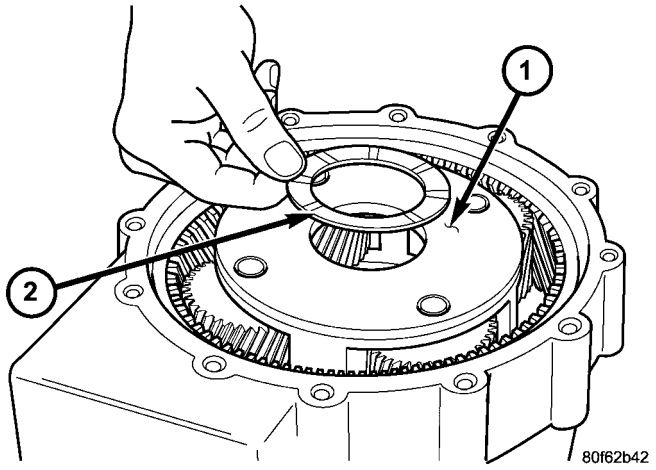

Fig. 39 Low Range Planetary Plastic Spacer

1 - LOW RANGE PLANETARY
2 - PLASTIC SPACER

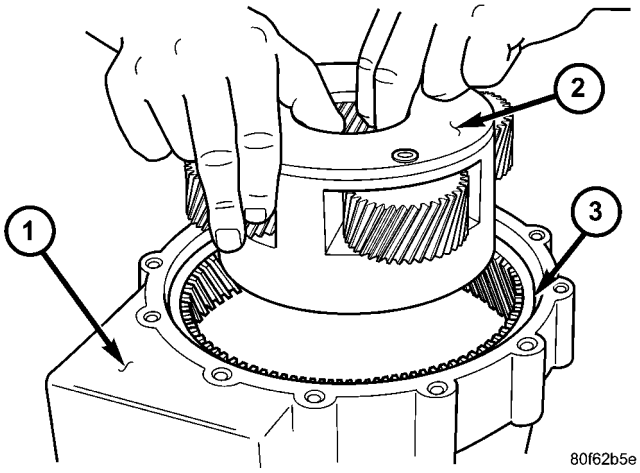

Fig. 40 Low Range Planetary Removal

1 - FRONT CASE HALF
2 - LOW RANGE PLANETARY
3 - ANNULUS GEAR

(8) Remove the annulus gear (Fig. 41) from the front case half.

(9) Support the input retainer on Cup 8148 as shown (Fig. 42).

(10) While using suitable snap-ring pliers to spread the input gear bearing snap-ring (Fig. 43), press downward on the retainer to remove the bearing.

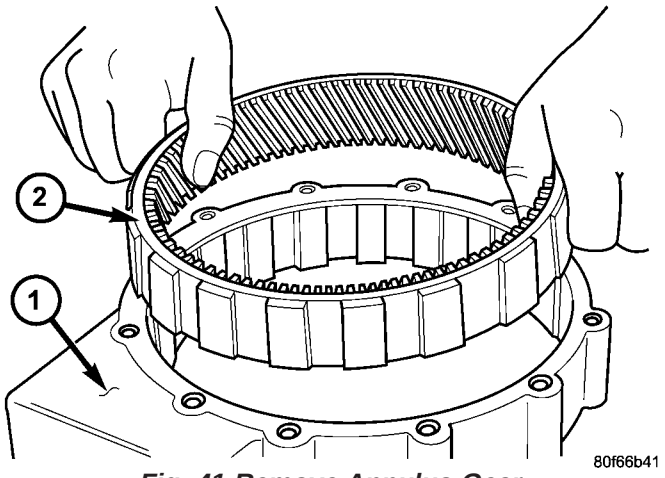

Fig. 41 Remove Annulus Gear

1 - FRONT CASE HALF
2 - ANNULUS GEAR

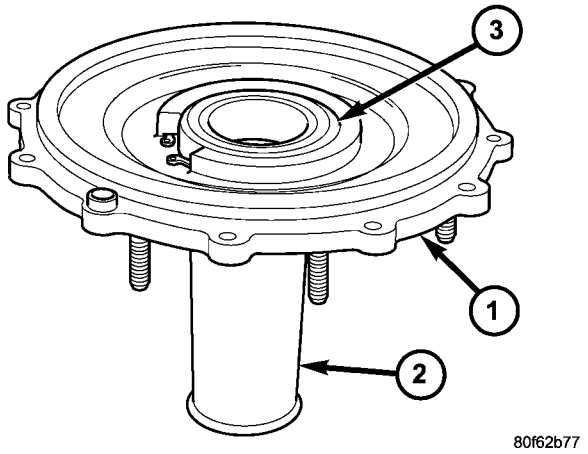

Fig. 42 Support Input Gear Bearing For Removal

1 - INPUT RETAINER
2 - CUP 8148
3 - INPUT GEAR BEARING

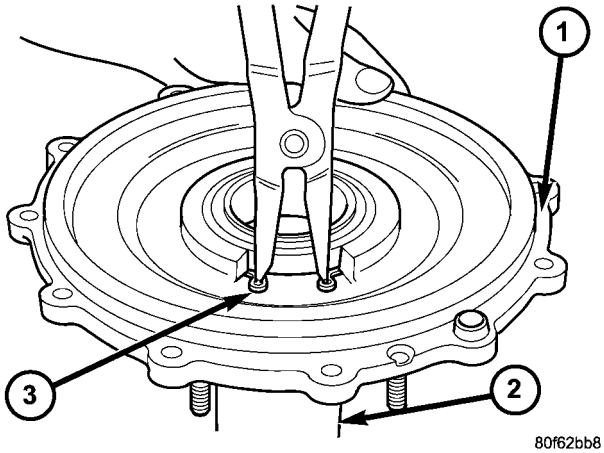

Fig. 43 Input Gear Bearing Removal

1 - INPUT RETAINER
2 - CUP 8148
3 - INPUT GEAR BEARING