TRANSFER CASE - NV241 (Continued)

(11) Remove the front output shaft bearing with Handle C-4171 and Installer 8239 (Fig. 44).

(12) Remove the rear output shaft bearing with Handle C-4171 and Installer 8239 (Fig. 45).

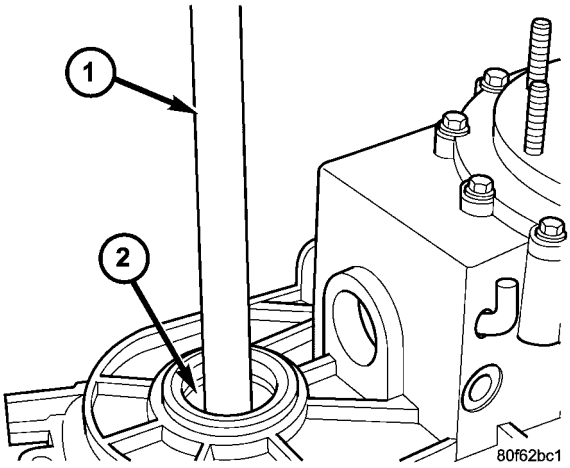

Fig. 44 Front Output Bearing Removal

1 - HANDLE C-4171
2 - INSTALLER 8239

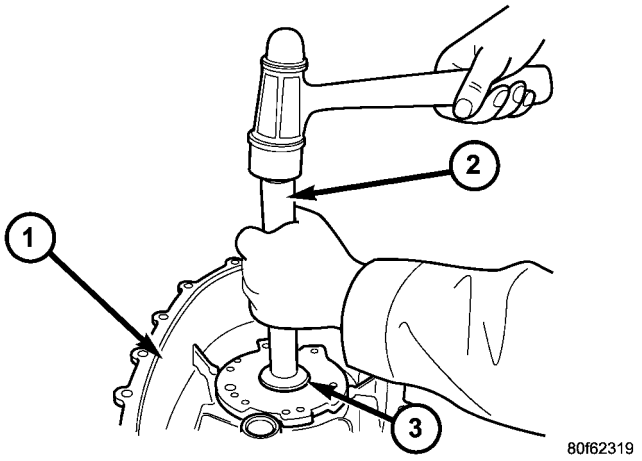

Fig. 45 Rear Output Bearing Removal

1 - REAR CASE HALF
2 - HANDLE C-4171
3 - INSTALLER 8239

CLEANING

Clean the transfer case parts with a standard parts cleaning solvent. Remove all traces of sealer from the cases and retainers with a scraper and 3M™ all purpose cleaner. Use compressed air to remove solvent residue from oil feed passages in the case halves, retainers, gears, and shafts.

INSPECTION

MAINSHAFT/SPROCKET/HUB

Inspect the splines on the hub and shaft and the teeth on the sprocket. Minor nicks and scratches can be smoothed with an oilstone, however, replace any part that is damaged.

Check the contact surfaces in the sprocket bore and on the mainshaft. Minor nicks and scratches can be smoothed with 320-400 grit emery cloth but do not try to salvage the shaft if nicks or wear is severe.

INPUT GEAR AND PLANETARY CARRIER

Check the teeth on the gear. Minor nicks can be dressed off with an oilstone but replace the gear if any teeth are broken, cracked, or chipped. The bearing surface on the gear can be smoothed with 300-400 grit emery cloth if necessary.

Examine the carrier body and pinion gears for wear or damage. The carrier will have to be replaced as an assembly if the body, pinion pins, or pinion gears are damaged. Inspect the plastic washer on the inside, bottom of the planetary carrier. The washer is trapped by the pinion gears and the complete planetary will need to be replaced if the washer is worn or damaged.

SHIFT FORKS/HUBS/SLEEVES

Check condition of the shift forks and mode fork shift rail. Minor nicks on the shift rail can be smoothed with 320-400 grit emery cloth.

Inspect the shift fork wear pads. The mode and range fork pads are serviceable and can be replaced if necessary.

Check both of the sleeves for wear or damage, especially on the interior teeth. Replace the sleeves if wear or damage is evident.

DRIVE CHAIN

Examine the drive chain and shaft bearings. replace the chain if stretched, distorted, or if any of the links bind. Replace the bearings if rough, or noisy.

LOW RANGE ANNULUS GEAR

Inspect annulus gear condition carefully. The gear can be serviced separately.

FRONT-REAR CASES

Inspect the cases for wear and damage. Replace the input retainer seal, do not reuse it.

Check case condition. If leaks were a problem, look for gouges and severe scoring of case sealing surfaces. Also make sure the front case mounting studs are in good condition.