TRANSFER CASE - NV241 (Continued)

Check the front case mounting studs and vent tube. The tube can be secured with Loctite™ 271 or 680 if loose. The stud threads can be cleaned up with a die if necessary. Also check condition of the fill/drain plug threads in the rear case. The threads can be repaired with a thread chaser or tap if necessary. Or the threads can be repaired with Helicoil™ stainless steel inserts if required.

OIL PUMP/OIL PICKUP

Examine the oil pump pickup parts. Replace the pump if any evidence of debris or damage exists. Do not disassemble the pump from the rear case half as individual parts are not available and it will not be possible to reassemble the pump cover to the rear case half. The pump is only available as part of the rear case half assembly. The pickup screen, hose, and tube are the only serviceable parts and are available separately.

ASSEMBLY

BEARINGS AND SEALS

(1) Position the input gear bearing in the input retainer bearing bore. Spread the snap-ring captured in the retainer with suitable snap-ring pliers and press the bearing into place. Verify that the snap-ring has engaged the groove in the bearing.

(2) Start front output shaft bearing in case (Fig. 46). Then seat bearing with Handle C-4171 and Installer 6953.

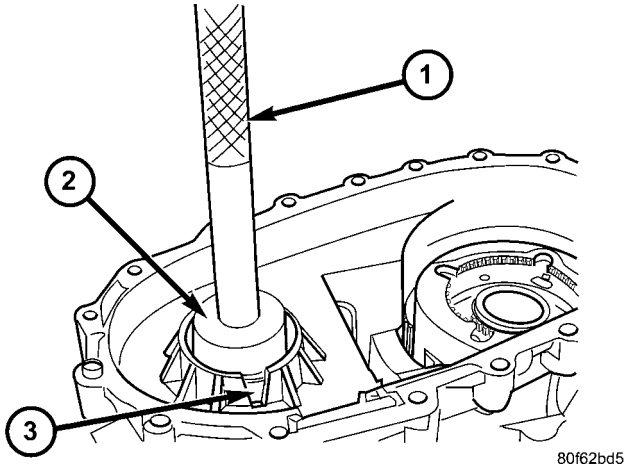

Fig. 46 Front Output Shaft Bearing Installation

1 - HANDLE C-4171
2 - INSTALLER 6953
3 - BEARING

(3) Install the front output shaft bearing retaining ring.

(4) Install the rear output shaft bearing into the rear case half with Installer 6953 and Handle C-4171 (Fig. 47).

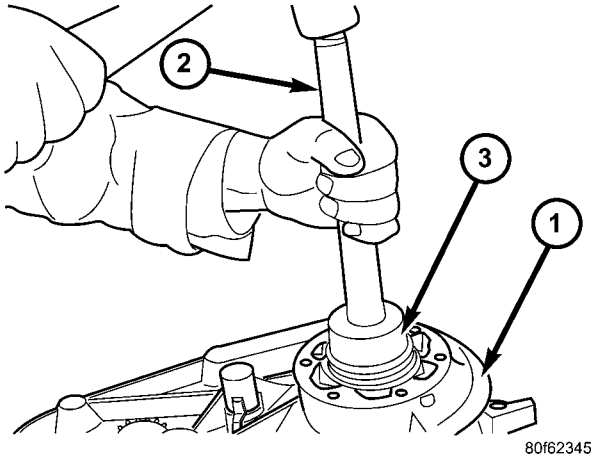

Fig. 47 Rear Output Bearing Installation

1 - REAR CASE HALF
2 - HANDLE C-4171
3 - INSTALLER 6953

(5) Remove the input gear pilot bearing using Puller Jaws 8240 and Cup 8148.

(6) Remove the input gear cup plug (Fig. 48) with a suitable drift and hammer inserted from the front of the input gear.

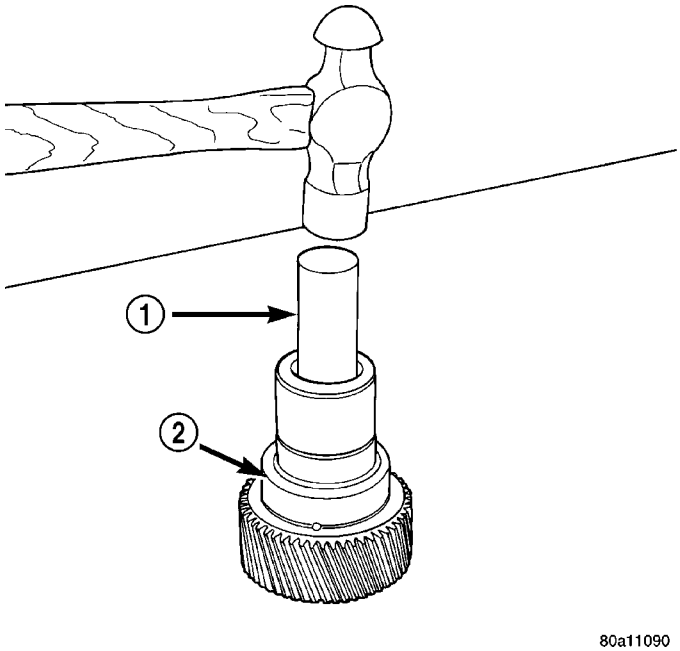

Fig. 48 Remove Input Gear Cup Plug

1 - DRIFT
2 - INPUT GEAR

(7) Install a new input gear cup plug with Installer 9045 and Handle C-4171.