TRANSFER CASE - NV241 (Continued)

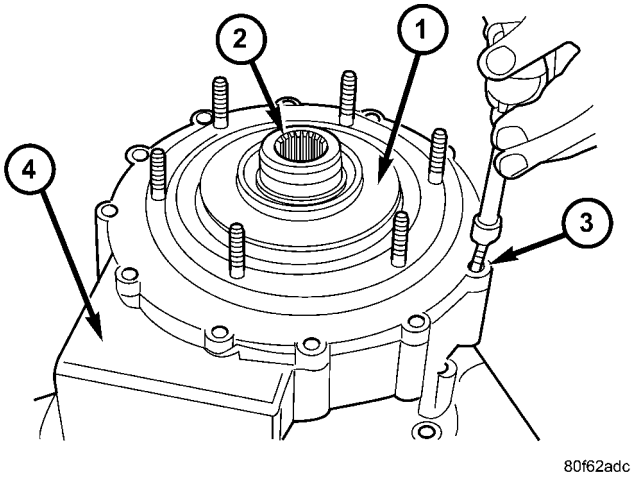

Fig. 56 Front Input Retainer Bolt Installation

1 - INPUT RETAINER
2 - INPUT GEAR
3 - BOLT
4 - FRONT CASE HALF

(8) Install the input gear to the low range planetary assembly and the input gear bearing.

(9) Install the input gear retaining snap-ring (Fig. 57) onto the input gear.

(10) Install new oil seal in front input retainer with Installer 8841 and Handle C-4171 (Fig. 58).

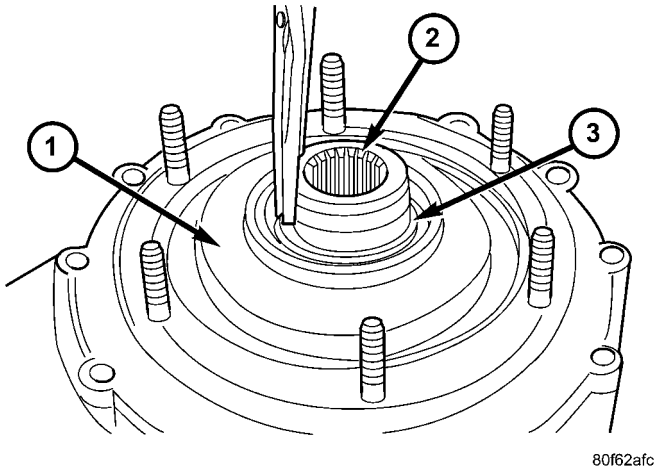

Fig. 57 Input Gear Snap-Ring Installation

1 - INPUT RETAINER
2 - INPUT GEAR
3 - SNAP-RING

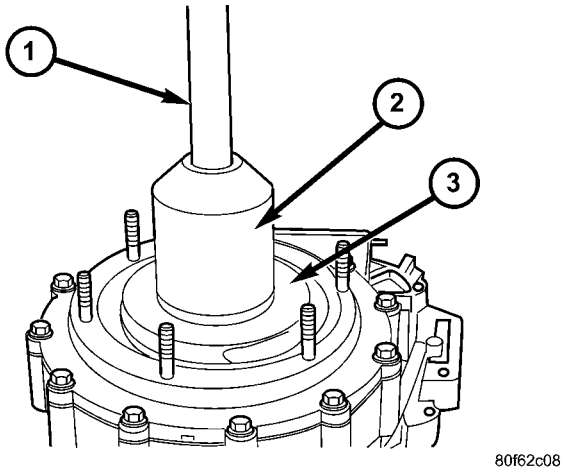

Fig. 58 Input Gear Seal Installation

1 - HANDLE C-4171
2 - INSTALLER 8841
3 - INPUT RETAINER

SHIFT FORKS AND MAINSHAFT

(1) Lubricate mainshaft splines with recommended transmission fluid.

(2) Install the drive sprocket drive hub onto the mainshaft (Fig. 59). Verify that the long shoulder is towards the front of the mainshaft.

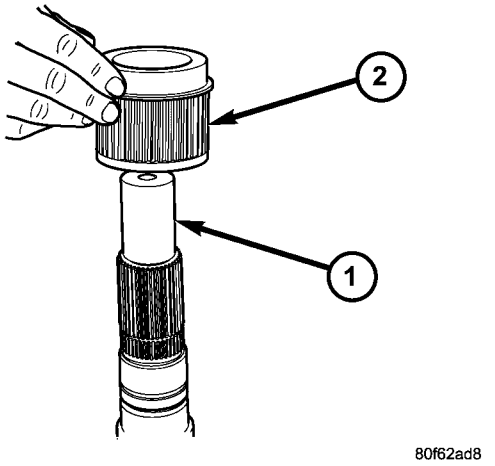

Fig. 59 Drive Sprocket Drive Hub Installation

1 - MAINSHAFT
2 - DRIVE SPROCKET DRIVE HUB