TRANSFER CASE - NV241 (Continued)

(3) Install the mode hub (Fig. 60) onto the mainshaft.

(4) Install the mode hub snap-ring (Fig. 61) onto the mainshaft.

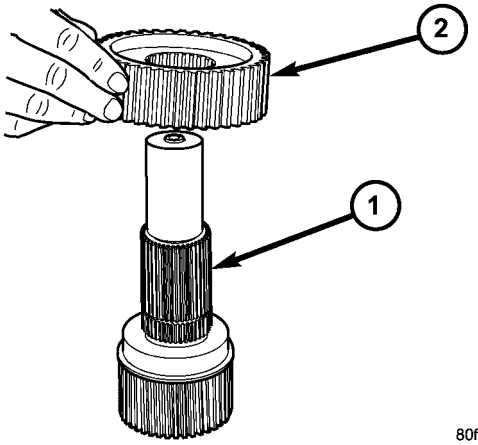

Fig. 60 Mode Hub Installation

1 - MAINSHAFT
2 - MODE HUB

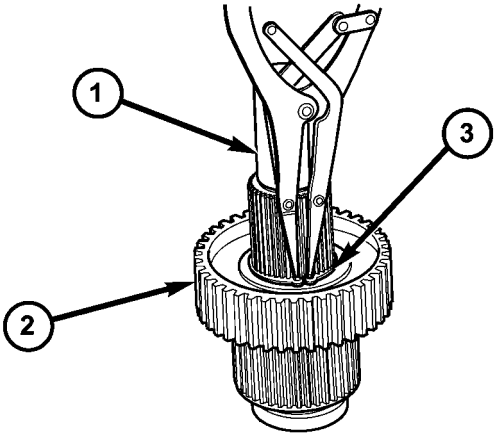

Fig. 61 Mode Hub Snap-Ring Installation

1 - MAINSHAFT
2 - MODE HUB
3 - SNAP-RING

(5) Rotate the mainshaft 180° and install the sliding clutch gear (Fig. 62) onto the drive sprocket drive hub.

(6) Install the mainshaft drive sprocket (Fig. 63) onto the drive hub.

(7) Install the mainshaft drive sprocket retaining ring (Fig. 64) onto the drive hub.

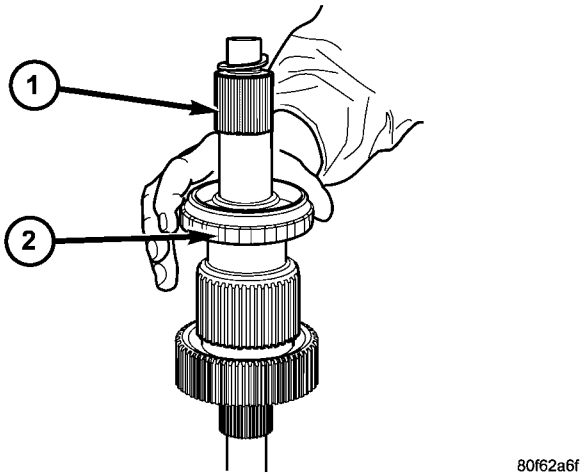

Fig. 62 Sliding Clutch Gear Installation

1 - MAINSHAFT
2 - SLIDING CLUTCH GEAR

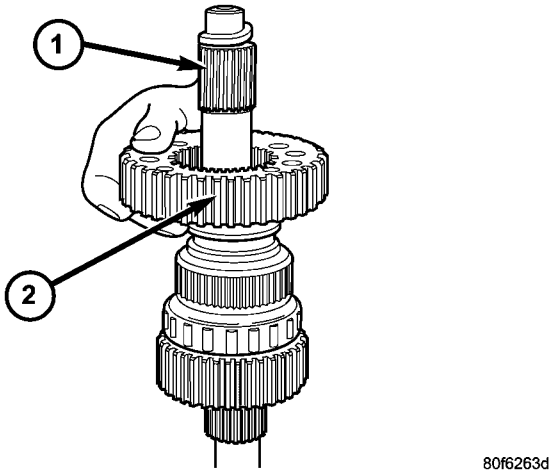

Fig. 63 Mainshaft Drive Sprocket Installation

1 - MAINSHAFT
2 - DRIVE SPROCKET

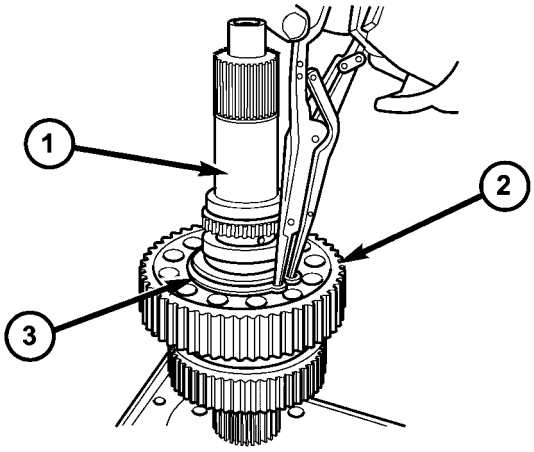

Fig. 64 Mainshaft Drive Sprocket Snap-Ring Installation

1 - MAINSHAFT
2 - DRIVE SPROCKET
3 - SNAP-RING