TRANSFER CASE - NV241 (Continued)

FRONT OUTPUT SHAFT AND DRIVE CHAIN

(1) Install front output shaft into the font output shaft bearing (Fig. 69).

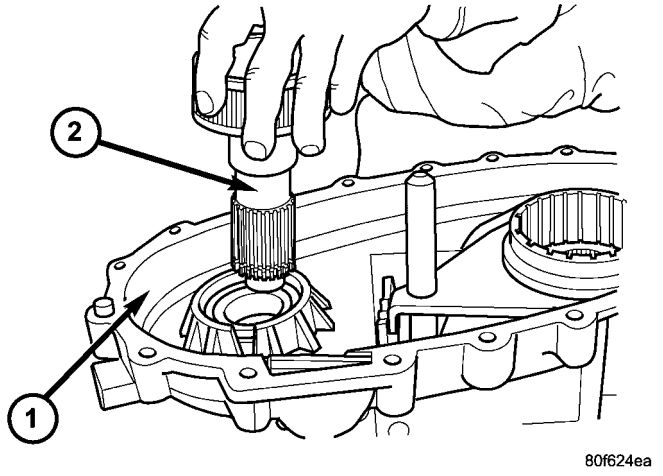

Fig. 69 Front Output Shaft Installation

1 - FRONT CASE HALF
2 - FRONT OUTPUT SHAFT

(2) Install the front output shaft snap-ring onto the front output shaft.

(3) Install new front output seal (Fig. 70) in front case with Installer 9041 and Handle C-4171.

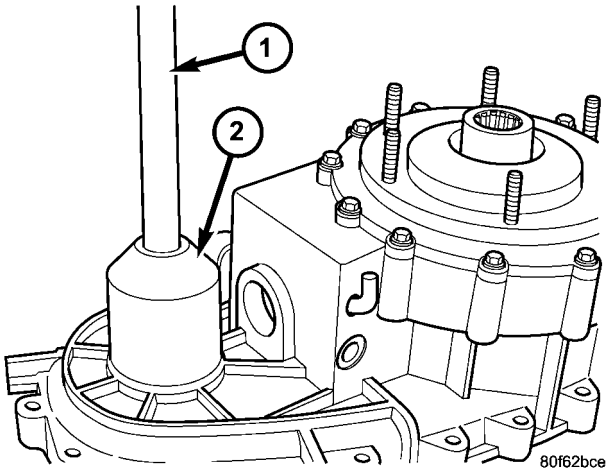

Fig. 70 Front Output Shaft Seal Installation

1 - HANDLE C-4171
2 - INSTALLER 9041

(4) Insert front sprocket in drive chain (Fig. 71).

(5) Install drive chain around mainshaft drive sprocket (Fig. 71). Then position front sprocket over front output shaft.

(6) Install the mainshaft into the range hub and mode sleeve and seat the front drive sprocket onto the front output shaft (Fig. 71).

(7) Install the front drive sprocket retaining ring (Fig. 72).

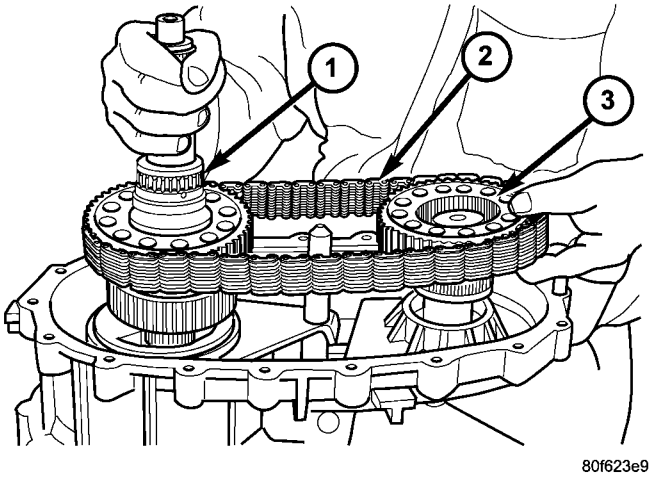

Fig. 71 Install Mainshaft, Drive Chain, and Front Sprocket

1 - MAINSHAFT
2 - DRIVE CHAIN
3 - DRIVE SPROCKET

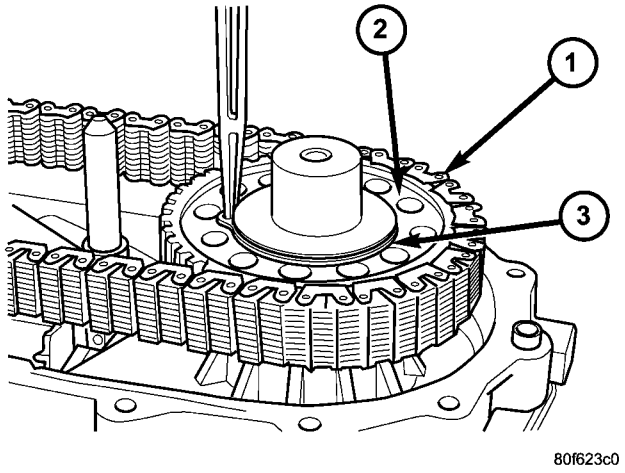

Fig. 72 Front Drive Sprocket Snap-Ring Installation

1 - DRIVE CHAIN
2 - FRONT DRIVE SPROCKET
3 - SNAP-RING