(8) Install spring and cups on shift rail (Fig. 73).

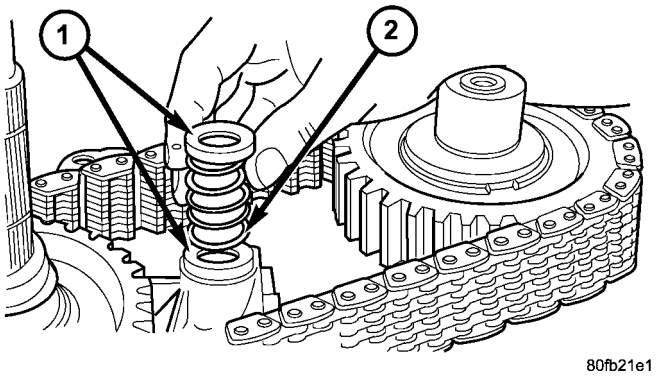

Fig. 73 Shift Rail Spring And Cups Installation

1 - CUPS (2)
2 - SPRING

(9) Insert magnet in front case pocket (Fig. 74).

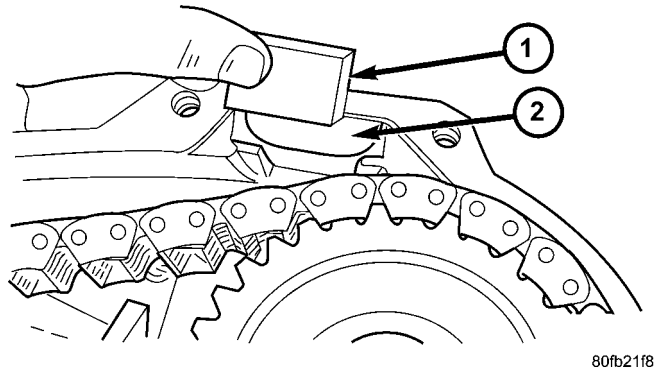

Fig. 74 Case Magnet Installation

1 - MAGNET
2 - CASE POCKET

OIL PUMP AND REAR CASE

CAUTION: Do not remove the bolts holding the oil pump cover to the rear case half. The oil pump cover is aligned to the rear output shaft inner bearing race and will become mis-aligned if the bolts are loosened. If the transfer case failure has generated any debris which may have become trapped in the oil pump. the rear case and oil pump assembly MUST be replaced.

Lubricate the oil pump components before installation. Prime the oil pickup tube by pouring a little oil into the tube before installation.

(1) Install new o-ring in pickup tube inlet of oil pump.

(2) Position oil pickup tube and filter in rear case. Be sure pickup filter is seated in case pocket and that pickup tube is aligned in case notches. Be sure hose that connects tube to filter is securely positioned.

(3) Install the transfer case position sensor (Fig. 75). Tighten the sensor to 20-34 N·m (16-25 ft.lbs.).

(4) Install the shift sector support (Fig. 76). Tighten the sector support to 27-42 N·m (20-30 ft.lbs.).

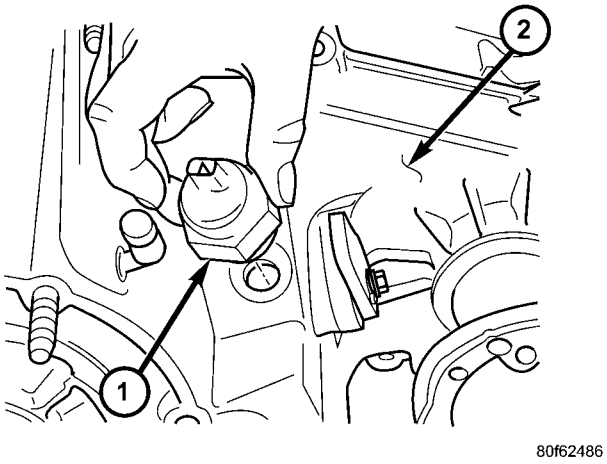

Fig. 75 Install Transfer Case Position Sensor

1 - TRANSFER CASE POSITION SENSOR
2 - TRANSFER CASE

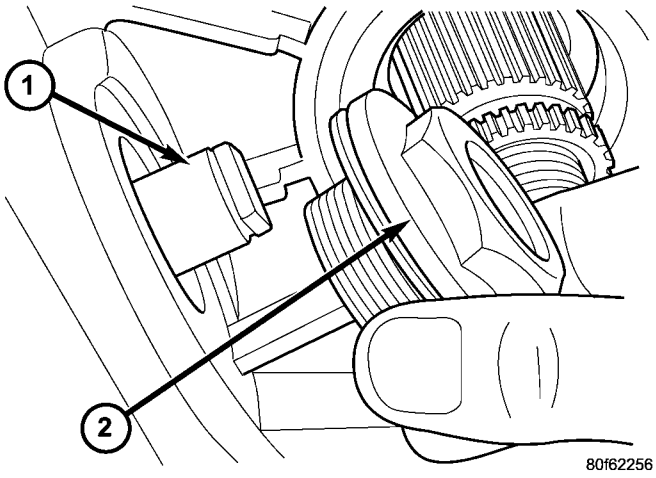

Fig. 76 Shift Sector Support Installation

1 - SHIFT SECTOR SHAFT
2 - SECTOR SUPPORT