TRANSFER CASE - NV241 (Continued)

(5) Install detent plunger and spring into the front case half. (Fig. 77).

(6) Install new o-ring on detent plug and install plug in front case (Fig. 77). Tighten plug to 16-25 N·m (12-18 ft. lbs.).

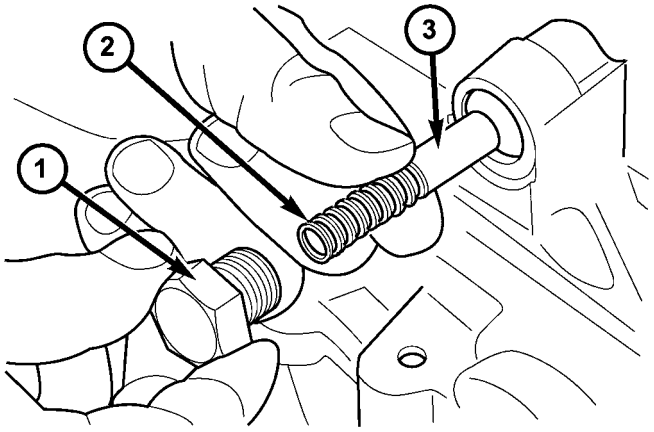


***Fig. 77 Detent Plug, Spring, and Plunger Installation***

1 - DETENT PLUG
2 - SPRING
3 - PLUNGER

(7) Install shift lever onto the sector shaft (Fig. 78).

(8) Install the shift lever bolt (Fig. 79). Tighten the bolt to 20-34 N·m (15-25 ft.lbs.)

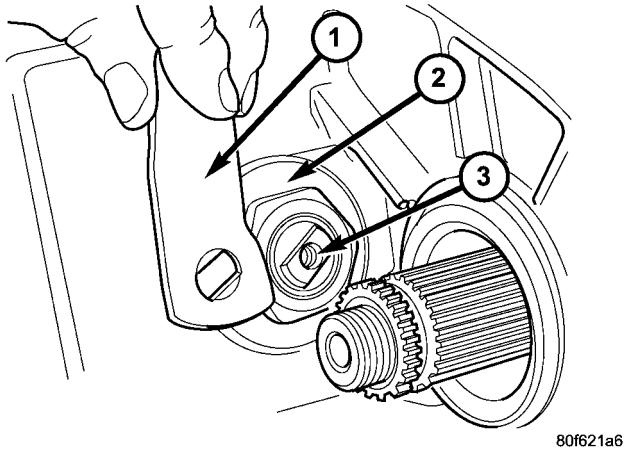


***Fig. 78 Shift Lever Installation***

1 - SHIFT LEVER
2 - SECTOR SUPPORT
3 - SHIFT SECTOR

(9) Shift the transfer case into a 4WD range. This will raise the mainshaft slightly and make installation of the rear case half much easier.

(10) Verify that the transfer case alignment dowels are properly installed.

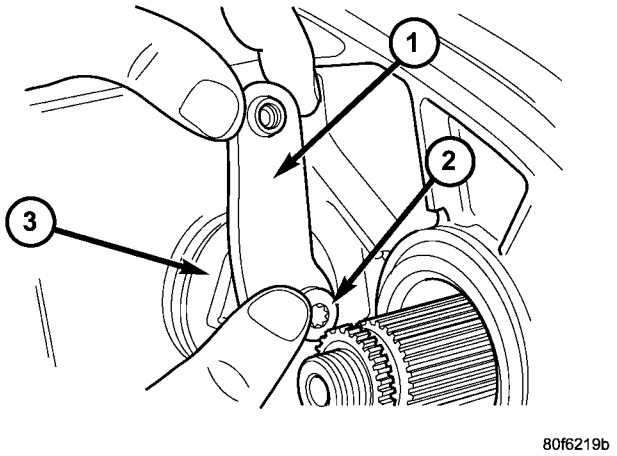


***Fig. 79 Shift Lever Bolt Installation***

1 - SHIFT LEVER
2 - BOLT
3 - SECTOR SUPPORT

(11) Apply bead of Mopar® Gasket Maker, or equivalent, to mating surface of front case. Keep sealer bead width to maximum of 3/16 inch. Do not use excessive amount of sealer as excess will be displaced into case interior.

(12) Align oil pump with mainshaft and align shift rail with bore in rear case. Then install rear case and oil pump assembly (Fig. 80). Be sure oil pickup tube remains in position during case installation.

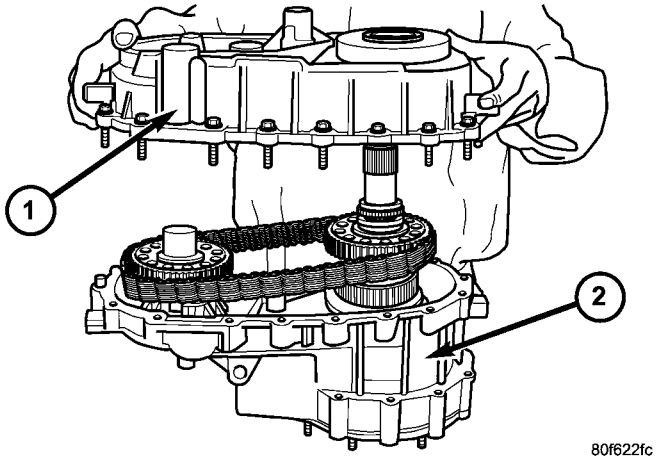


***Fig. 80 Rear Case Half Installation***

1 - REAR CASE HALF
2 - FRONT CASE HALF

(13) Install 4-5 rear case-to front case bolts to hold rear case in position. Tighten bolts snug but not to specified torque at this time.