TRANSFER CASE - NV241 (Continued)

CAUTION: Verify that shift rail, and case alignment dowels (Fig. 81) are seated before installing any bolts. Case could be cracked if shaft rail or dowels are misaligned.

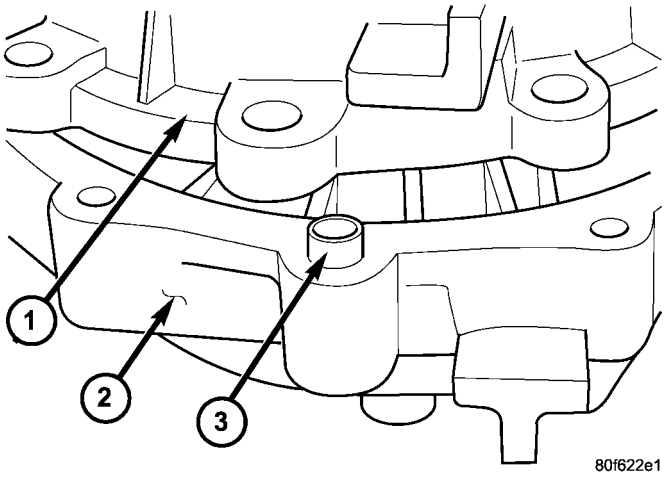

Fig. 81 Case Alignment Dowel

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - ALIGNMENT DOWEL

(14) Apply Loctite™ 242 to remainder of rear case-to-front case bolt threads and install bolts (Fig. 82). Tighten all bolts to 20-27 N·m (15-20 ft. lbs.).

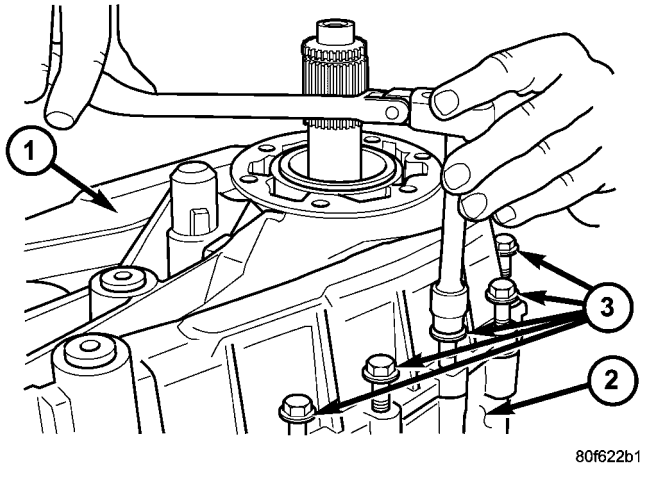

Fig. 82 Case Half Bolt Installation

1 - REAR CASE HALF
2 - FRONT CASE HALF
3 - BOLTS

YOKE

(1) Install yoke seal onto front shaft (Fig. 83).

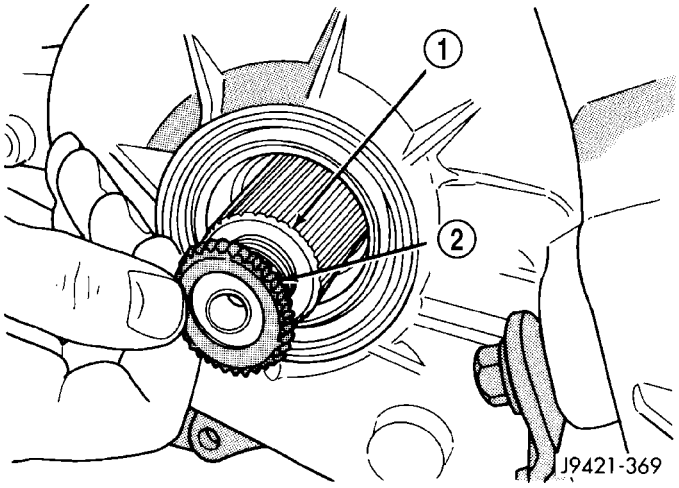

Fig. 83 Installing Flange Seal On Front Shaft

1 - FRONT OUTPUT SHAFT
2 - FLANGE SEAL

(2) Install yoke onto front shaft (Fig. 84). Then install and tighten a new yoke nut to 122-176 N·m (90-130 ft. lbs.) torque. Never re-use a yoke nut.

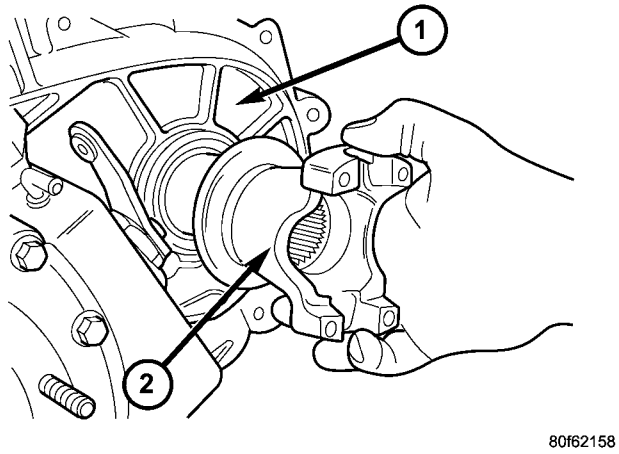

Fig. 84 Front Yoke Installation

1 - TRANSFER CASE
2 - FRONT YOKE