REAR EXTENSION SEAL (Continued)

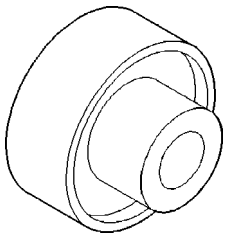

Installer, Bearing - 6953

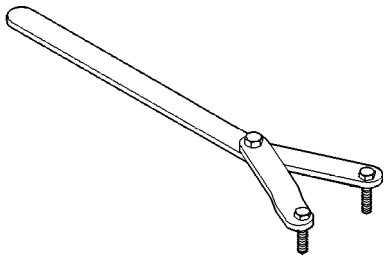

Spanner Wrench - 6958

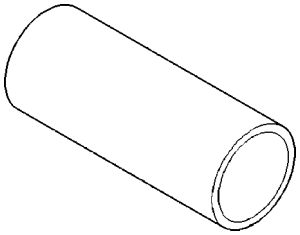

Cup - 8148

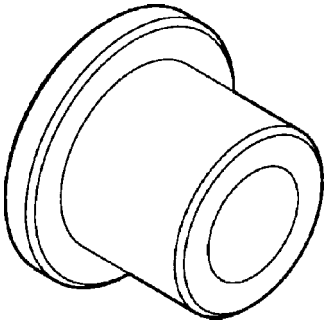

Installer, Bearing - 8239

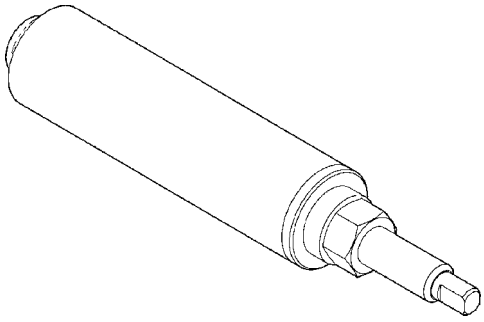

Remover - 8240

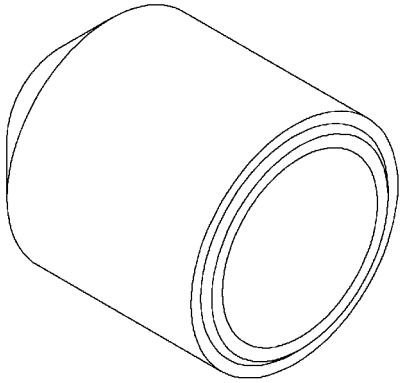

Installer, Seal - 8841

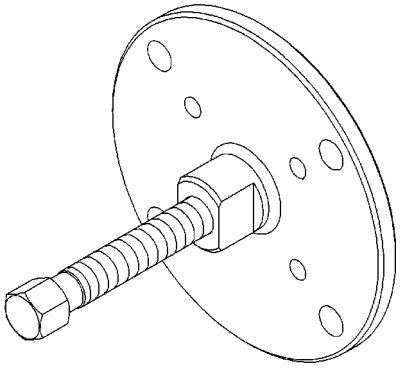

Flange Puller - 8992

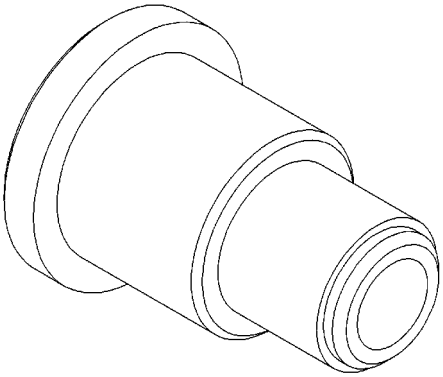

Installer, Cup Seal - 9045

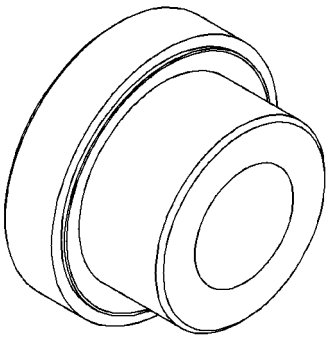

Installer, Bearing - 9047