REAR EXTENSION SEAL

REMOVAL

(1) Raise and support vehicle.
(2) Remove rear propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)
(3) Remove the rear companion flange from the output shaft.
(4) Using a suitable pry tool or slide-hammer mounted screw, remove the rear extension seal.

INSTALLATION

(1) Clean fluid residue from sealing surface and inspect for defects.
(2) Using Installer 9041 and Handle C-4171, install seal in rear extension (Fig. 92).

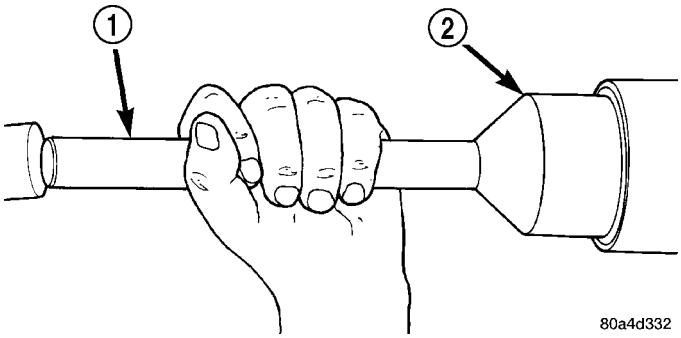

Fig. 92 Install Rear Extension Seal

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 9041

(3) Install the companion flange onto the output shaft.
(4) Install a new companion flange nut and tighten to 176-271 N·m (130-200 ft.lbs.).
(5) Install propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)
(6) Verify proper transfer case fluid level.
(7) Lower vehicle.

FLUID

STANDARD PROCEDURE - FLUID DRAIN AND FILL

The fill and drain plugs are both in the rear case (Fig. 93). Correct fill level is to the bottom edge of the fill plug hole. Be sure the vehicle is level to ensure an accurate fluid level check.

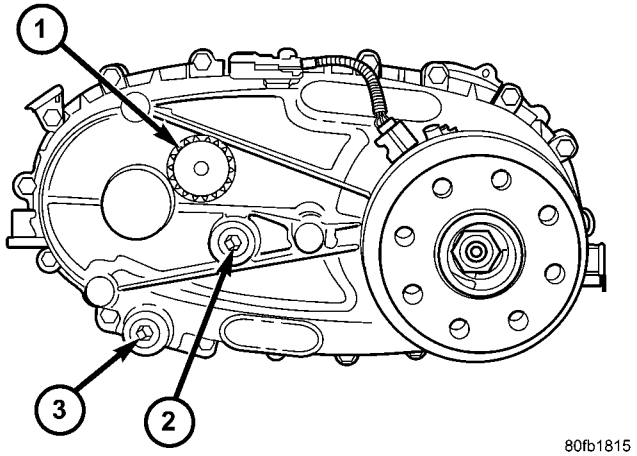

Fig. 93 Transfer Case Identification Tag and Fill/Drain Plugs

1 - IDENTIFICATION TAG
2 - FILL PLUG
3 - DRAIN PLUG

FRONT OUTPUT SHAFT SEAL

REMOVAL

(1) Shift transfer case into NEUTRAL.
(2) Raise vehicle.
(3) Remove front propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - REMOVAL)
(4) Using Spanner Wrench 6958, remove yoke nut (Fig. 94). Discard nut after removal. It is not reusable.

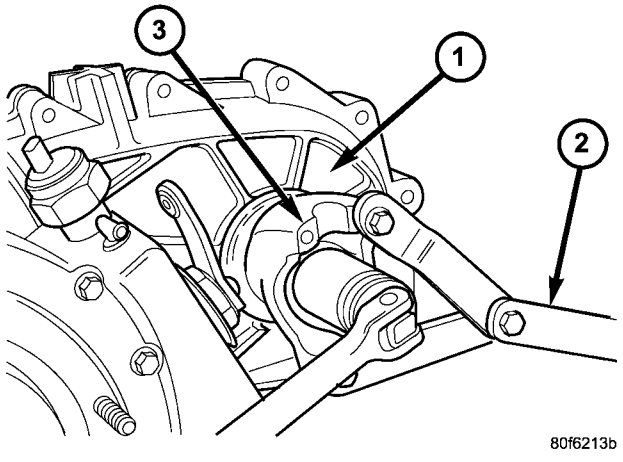

Fig. 94 Front Yoke Nut Removal

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE