FRONT OUTPUT SHAFT SEAL (Continued)

(5) Remove yoke from output shaft (Fig. 95). Use puller C-452 if flange can not be removed by hand.

(6) Remove yoke rubber seal from front output shaft (Fig. 96).

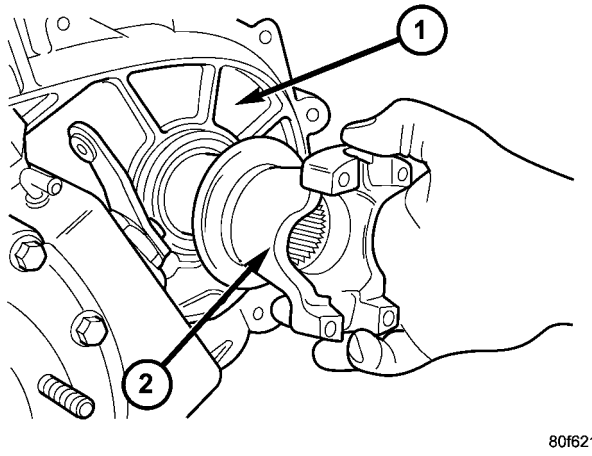

Fig. 95 Front Yoke Removal

1 - TRANSFER CASE
2 - FRONT YOKE

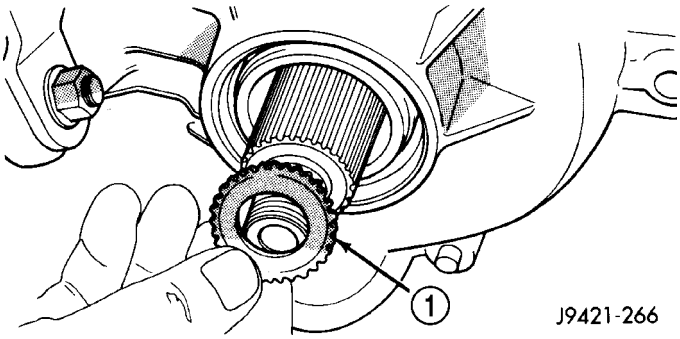

Fig. 96 Yoke Seal Removal

1 - FLANGE SEAL

(7) Remove front output shaft seal with suitable pry tool, or a slide hammer mounted screw.

INSTALLATION

(1) Install new front output seal in front case with Installer Tool 9041 and Handle C-4171 (Fig. 97).

(2) Install yoke seal on front output shaft (Fig. 98).

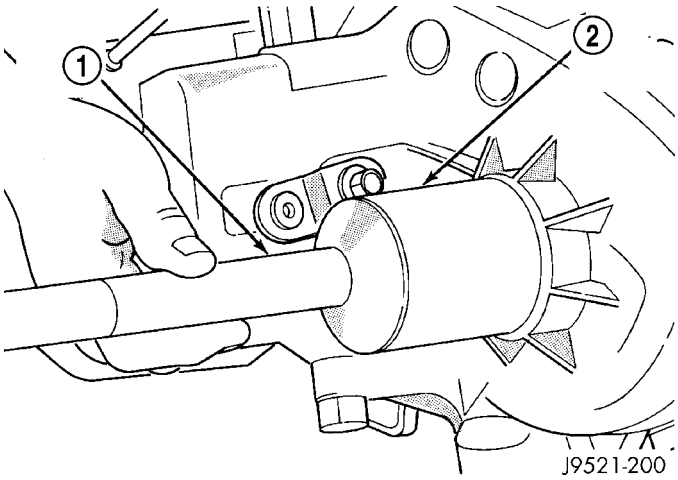

Fig. 97 Front Output Seal Installation - Typical

1 - SPECIAL TOOL C-4171
2 - SPECIAL TOOL 9041

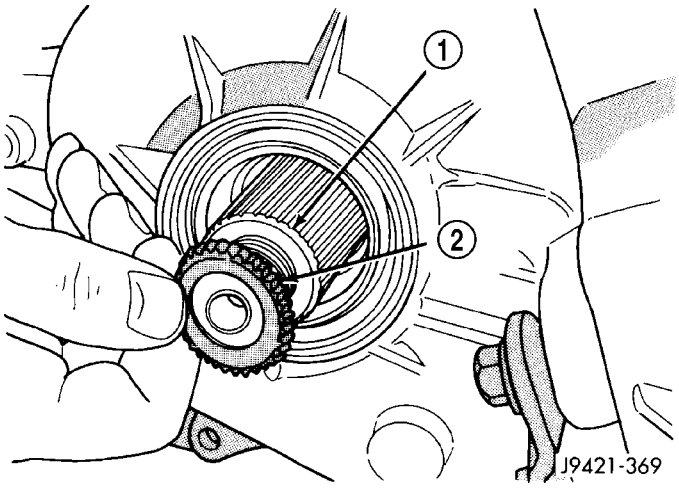

Fig. 98 Installing Flange Seal On Front Shaft

1 - FRONT OUTPUT SHAFT
2 - FLANGE SEAL