FRONT OUTPUT SHAFT SEAL (Continued)

(3) Install yoke on front output shaft (Fig. 99). Install a new yoke nut onto the front output shaft.

(4) Using Spanner Wrench 6958 (Fig. 100), tighten the yoke nut to 176-271 N·m (130-200 ft. lbs.) torque.

(5) Install propeller shaft. (Refer to 3 - DIFFERENTIAL & DRIVELINE/PROPELLER SHAFT/PROPELLER SHAFT - INSTALLATION)

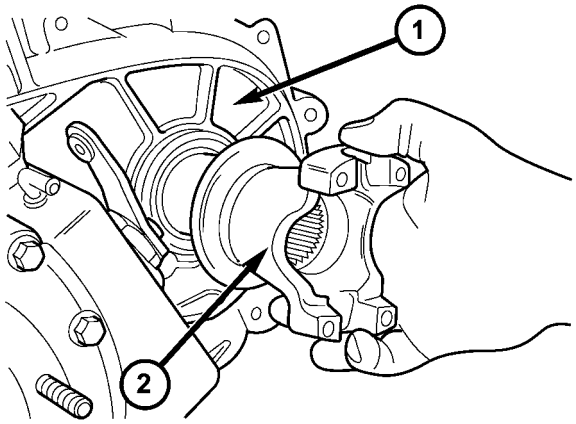

Fig. 99 Front Yoke Installation

1 - TRANSFER CASE
2 - FRONT YOKE

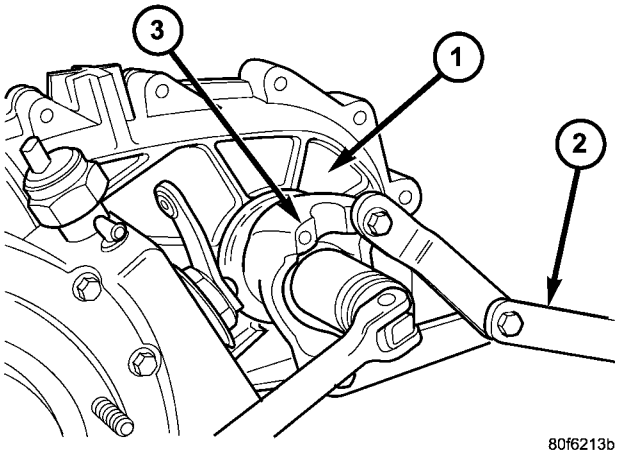

Fig. 100 Front Yoke Nut Installation

1 - TRANSFER CASE
2 - HOLDER 6958
3 - FRONT YOKE

POSITION SENSOR

DESCRIPTION

The transfer case position sensor is an electronic device whose output can be interpreted to indicate the transfer case's current operating mode. The sensor consists of a five position, resistive multiplexed circuit which returns a specific resistance value to the Powertrain Control Module (PCM) for each transfer case operating mode. The sensor is located on the top of the transfer case, just left of the transfer case centerline and rides against the sector plate roostercomb. The PCM supplies 5VDC (+/- 0.5V) to the sensor and monitors the return voltage to determine the sector plate, and therefore the transfer case, position.

OPERATION

OPERATING MODE VERSUS RESISTANCE

SENSOR POSITION	OPERATING MODE	SENSOR RESISTANCE (ohms)
1	2H	1124-1243
2	4H	650-719
3	NEUTRAL	389-431
4	4L	199-221
5	NOT USED	57-64

During normal vehicle operation, the Powertrain Control Module (PCM) monitors the transfer case position sensor return voltage to determine the operating mode of the transfer case. Refer to the Operating Mode Versus Resistance table for the correct resistance (1-6) (Fig. 101) for each position.

REMOVAL

(1) Raise and support the vehicle.

(2) Disengage the transfer case position sensor connector from the position sensor.

(3) Remove the position sensor from the transfer case.

INSTALLATION

(1) Inspect the o-ring seal on the transfer case position sensor. Replace the o-ring if necessary.