POSITION SENSOR (Continued)

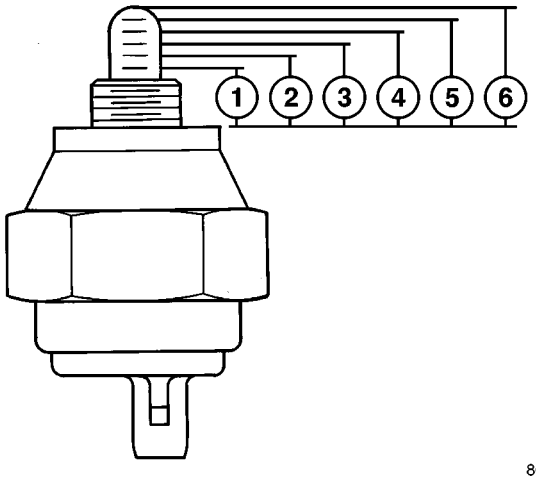

Fig. 101 Position Sensor Linear Movement

1 - POSITION 1 - 10mm ±0.5mm
2 - POSITION 2 - 12mm ±0.5mm
3 - POSITION 3 - 14mm ±0.5mm
4 - POSITION 4 - 16mm ±0.5mm
5 - POSITION 5 - 18mm ±0.5mm
6 - POSITION 6 - 20mm±0.5mm - FULL EXTENSION

(2) Install the transfer case position sensor into the transfer case. Torque the sensor to 20-34 N·m (15-25 ft.lbs.).

(3) Engage the transfer case position sensor connector to the position sensor.

(4) Lower vehicle.

(5) Verify proper sensor operation.

SHIFT LEVER

REMOVAL

(1) Shift transfer case into 4L.

(2) Raise vehicle.

(3) Loosen adjusting trunnion locknut and slide shift rod out of trunnion (Fig. 102). If rod lacks enough travel to come out of trunnion, push trunnion out of torque shaft.

(4) Lower vehicle.

(5) Remove console. (Refer to 23 - BODY/INTERIOR/FLOOR CONSOLE - REMOVAL)

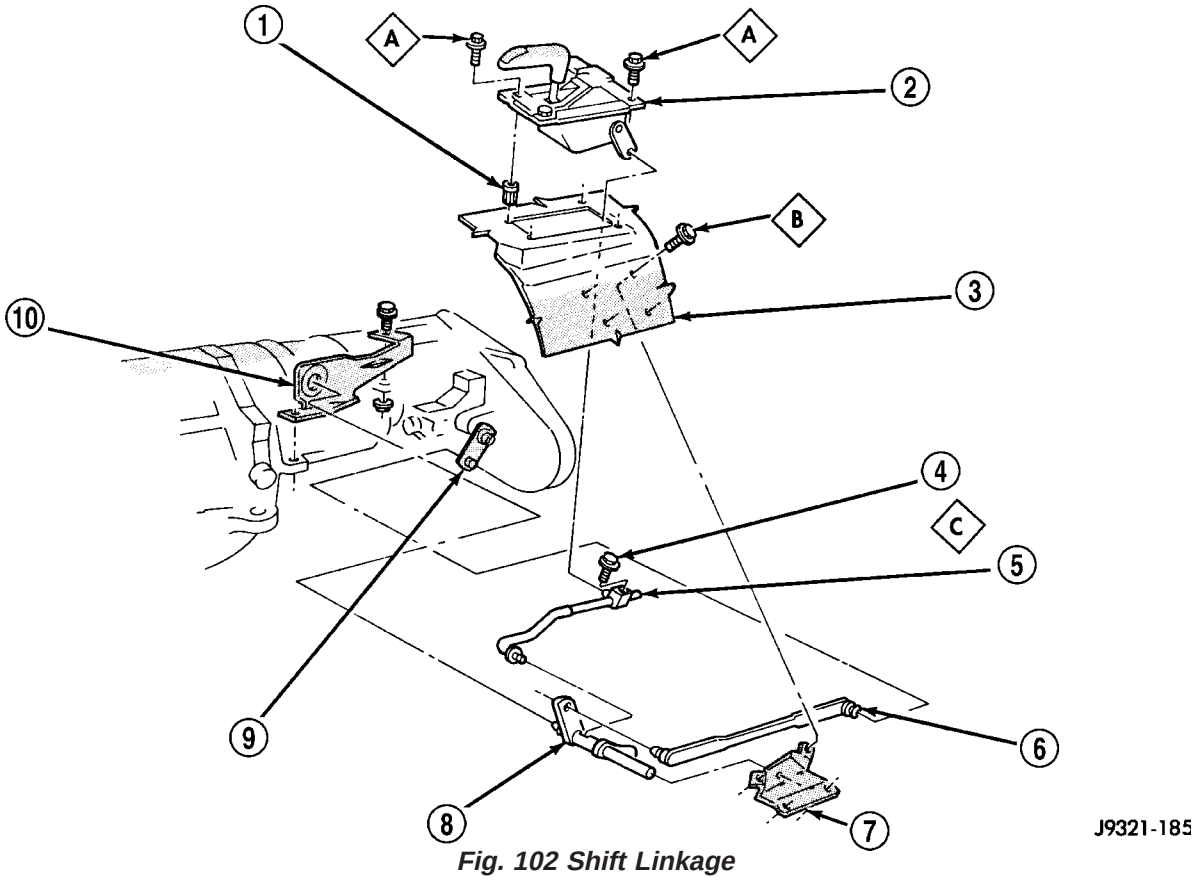

Fig. 102 Shift Linkage

1 - Rivnut (4)
2 - Shift Lever Assembly
3 - Floorpan
4 - Trunnion Lock Bolt
5 - Selector Rod and Trunnion
6 - Shift Lever Rod
7 - Torque Shaft Frame Bracket
8 - Torque Shaft
9 - Transfer Case Shift Lever
10 - Torque Shaft Transfer Case Bracket
A - 3-4 N·m (27-35 in. lbs.)
B - 11-14 N·m (97-123 in. lbs.)
C - 8-14 N·m (72-120 in. lbs.)