SPARE TIRE CARRIER

REMOVAL

(1) Remove the spare tire from the wheel bracket (Fig. 18).

(2) Remove the bolts that attach the tire bracket to the tailgate (Fig. 19).

(3) Disconnect CHMSL.

(4) Remove the bracket and the gaskets from the tailgate.

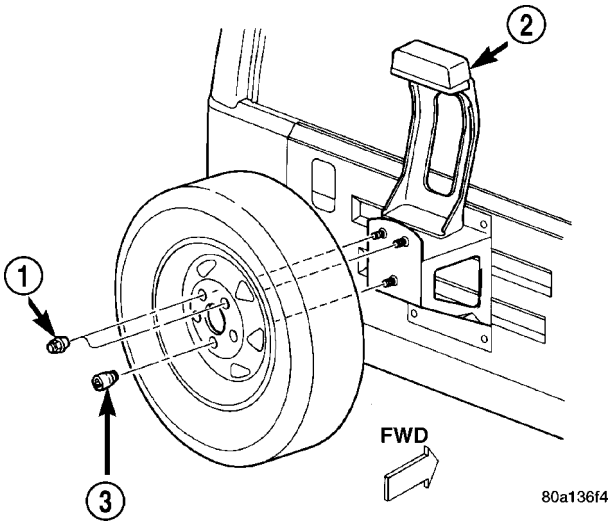

Fig. 18 Spare Tire

1 - WHEEL NUT
2 - CHMSL
3 - LOCK NUT

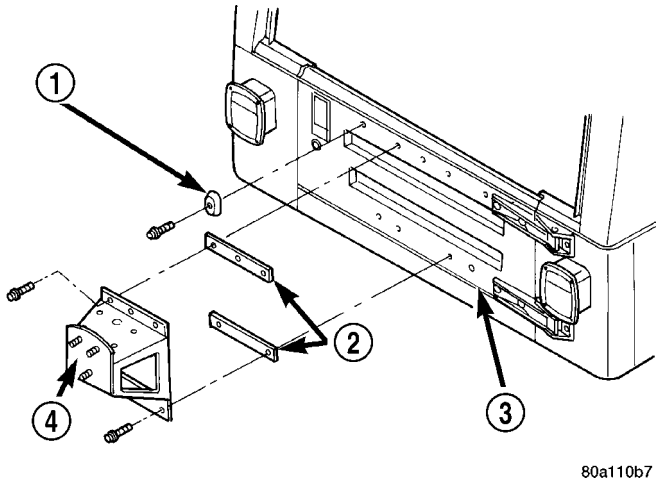

Fig. 19 Spare Tire Bracket

1 - BUMPER
2 - GASKET
3 - TAILGATE
4 - SPARE TIRE BRACKET

INSTALLATION

(1) Position the gaskets and the tire bracket on the tailgate and install the bolts. Tighten the bolts to 24 N·m (17 ft. lbs.) torque.

(2) Connect CHMSL connector.

(3) Install the spare tire on the tire bracket.

WHEELS

DESCRIPTION

The rim size is on the vehicle safety certification label located on the drivers door shut face. The size of the rim is determined by the drivetrain package. Original equipment wheels/rims are designed for operation up to the specified maximum vehicle capacity.

All models use stamped steel, cast aluminum or forged aluminum wheels. Every wheel has raised sections between the rim flanges and rim drop well called safety humps (Fig. 20).

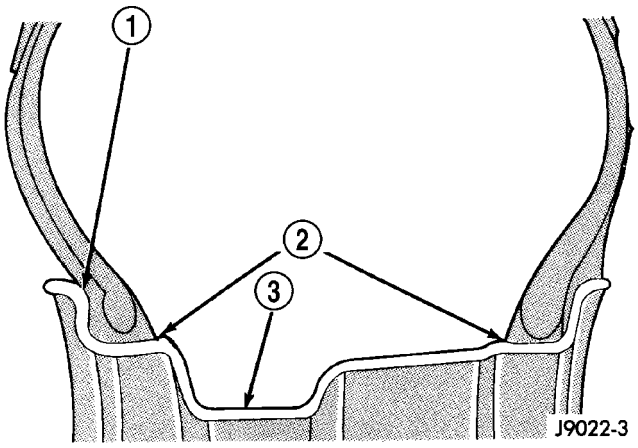

Fig. 20 Safety Rim

1 - FLANGE
2 - RIDGE
3 - WELL

Initial inflation of the tire forces the bead over these raised sections. In case of rapid loss of air pressure, the raised sections help hold the tire on the wheel.

The wheel studs and nuts are designed for specific applications. All aluminum and some steel wheels have wheel stud nuts with an enlarged nose. This enlarged nose is necessary to ensure proper retention of the wheels. Do not use replacement studs or nuts with a different design or lesser quality.