WHEELS (Continued)

Original equipment wheels are available through your dealer. Replacement wheels from any other source should be equivalent in:

- Load carrying capacity
- Diameter
- Width
- Offset
- Mounting configuration

Failure to use equivalent replacement wheels may affect the safety and handling of your vehicle. Replacement with **used** wheels is not recommended. Their service history may have included severe treatment.

SPECIFICATIONS

TORQUE CHART

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Lug Nut 1/2 X 20 with 60° Cone	115-156	85-115	—

STUDS

REMOVAL

(1) Raise and support vehicle.
(2) Remove wheel and tire assembly.
(3) Remove brake caliper, caliper adapter and rotor, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - REMOVAL).
(4) Remove stud from hub with Remover C-4150A (Fig. 22).

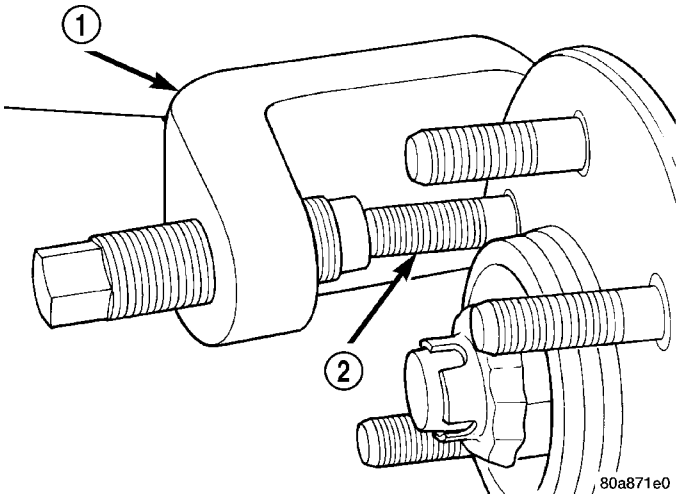

Fig. 22 Wheel Stud Removal

1 - REMOVER
2 - WHEEL STUD

INSTALLATION

(1) Install new stud into hub flange.
(2) Install three washers onto stud, then install lug nut with the flat side of the nut against the washers.
(3) Tighten lug nut until the stud is pulled into the hub flange. Verify that the stud is properly seated into the flange.
(4) Remove lug nut and washers.
(5) Install the brake rotor, caliper adapter, and caliper, (Refer to 5 - BRAKES/HYDRAULIC/MECHANICAL/ROTORS - INSTALLATION).
(6) Install wheel and tire assembly, use new lug nut on stud or studs that were replaced. (Refer to 22 - TIRES/WHEELS/WHEELS - STANDARD PROCEDURE).
(7) Remove support and lower vehicle.