TAILGATE

TABLE OF CONTENTS

page

TAILGATE OUTSIDE HANDLE
REMOVAL 13
INSTALLATION 13
TAILGATE HINGE
REMOVAL 14
INSTALLATION 14
TAILGATE LATCH
REMOVAL 14
INSTALLATION 14
TAILGATE LATCH STRIKER
REMOVAL 15
INSTALLATION 15
LIFTGATE GLASS HINGE
REMOVAL 15
INSTALLATION 15
LIFTGATE GLASS
REMOVAL 15
INSTALLATION 16
LIFTGATE GLASS WEATHERSTRIP
DESCRIPTION 16
TAILGATE LOCK CYLINDER
REMOVAL 16
INSTALLATION 16
LIFTGATE GLASS SUPPORT CYLINDER
REMOVAL 16
INSTALLATION 16
TAILGATE
REMOVAL 17
INSTALLATION 17
ADJUSTMENTS
ADJUSTMENT 17

TAILGATE OUTSIDE HANDLE

REMOVAL

(1) Remove the latch from the tailgate. (Refer to 23 - BODY/TAILGATE/LATCH - REMOVAL)

(2) Remove the screws attaching the outside handle to the tailgate (Fig. 1).

(3) Separate the outside handle and seal from the tailgate.

INSTALLATION

(1) Position the seal and outside release handle on the tailgate. and install screws.

(2) Install the screws attaching the outside handle to the tailgate.

(3) Install the latch. (Refer to 23 - BODY/TAILGATE/LATCH - INSTALLATION)

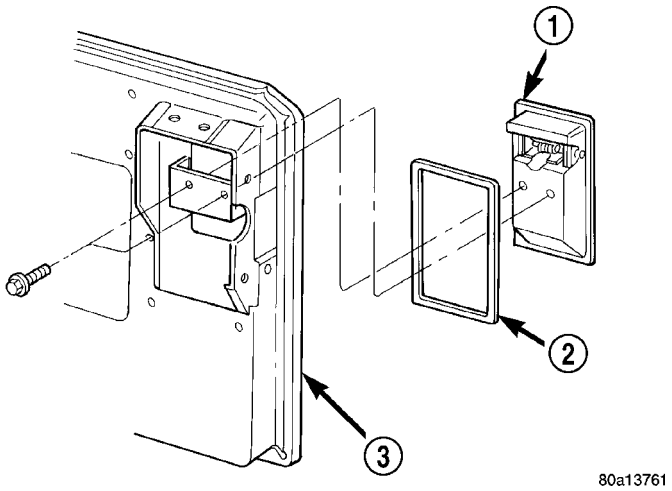

Fig. 1 TAILGATE OUTSIDE HANDLE

1 - OUTSIDE HANDLE
2 - SEAL
3 - TAILGATE