TAILGATE HINGE

REMOVAL

NOTE: Hinges may be serviced individually. If both are to be serviced, remove/install hinges one at a time.

(1) Using a grease pencil or equivalent, mark the position of the hinge on the body.
(2) Remove the screws attaching the hinge to the body and tailgate (Fig. 2).
(3) Separate the hinge from the tailgate.

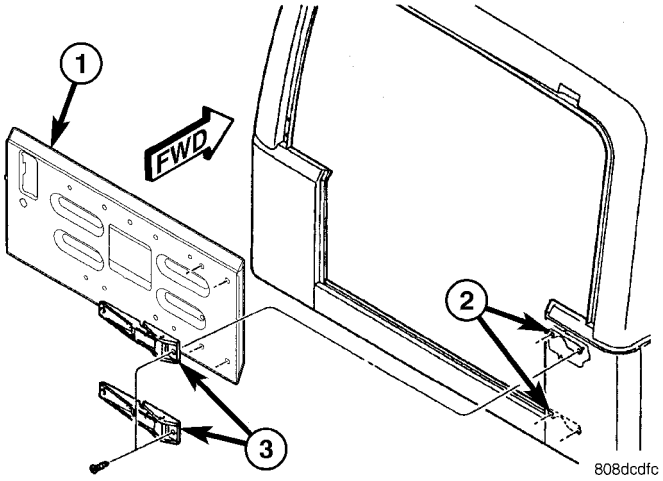

Fig. 2 TAILGATE HINGE

1 - TAILGATE
2 - NUT PLATE
3 - HINGE

INSTALLATION

NOTE: Hinges may be serviced individually. If both are to be serviced, remove/install hinges one at a time.

(1) Prepare and paint the replacement hinge to match the body paint color.
(2) Lubricate the hinge with spray lubricant.
(3) Align and position the hinge on the body and tailgate.
(4) Install the screws and tighten the screws to 23 N·m (200 in. lbs.).

TAILGATE LATCH

REMOVAL

(1) Open the tailgate and remove the latch trim cover (Fig. 3).
(2) Disconnect the outside handle to latch rod.
(3) Disconnect the lock cylinder to latch rod.
(4) Remove the screw attaching latch to tailgate.
(5) Separate the latch from the tailgate.

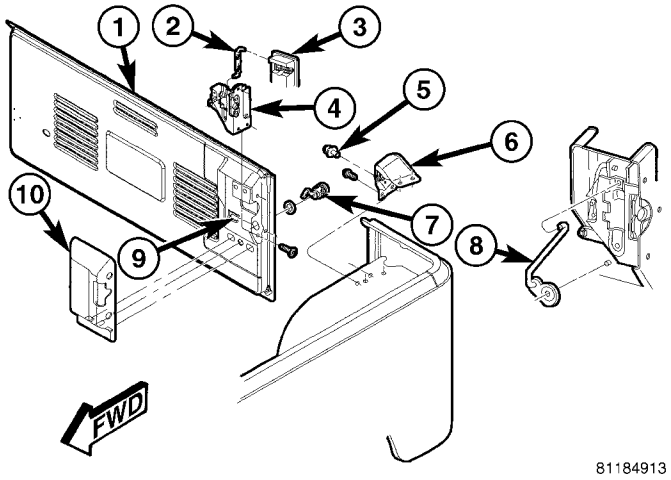

Fig. 3 TAILGATE LATCH

1 - TAILGATE
2 - OUTSIDE HANDLE ROD
3 - OUTSIDE HANDLE
4 - LATCH
5 - STRIKER
6 - STRIKER MOUNTING BRACKET
7 - LOCK CYLINDER
8 - LOCK CYLINDER ROD
9 - LOCK CYLINDER RETAINER CLIP
10 - LATCH COVER

INSTALLATION

(1) Position the latch in the tailgate.
(2) Install the screw attaching latch to tailgate. Do not tighten screw.
(3) Connect the lock cylinder to latch rod.
(4) Connect the outside handle to latch rod.
(5) Install the latch trim cover.