TAILGATE LATCH STRIKER

REMOVAL

(1) Remove the striker from the bracket.
(2) Remove the shim washers from the bracket.
(3) Remove the screws attaching the striker bracket to the body.

INSTALLATION

(1) Position the striker bracket on the body and install the screws.
(2) Position the striker and shim washers on the striker bracket.
(3) Install the striker in the bracket and tighten the striker to 71 N·m (52 ft. lbs.).

LIFTGATE GLASS HINGE

REMOVAL

(1) Open tailgate.
(2) Open and support liftgate glass.
(3) Remove wiper motor cover (right hinge only). (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - REMOVAL)
(4) Remove the wiper blade. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER BLADE - REMOVAL)
(5) Remove the nut attaching the liftgate hinge to the liftgate glass.
(6) Mark the position of the hinge in the top and remove the bolts attaching the hinge to the top (Fig. 4).

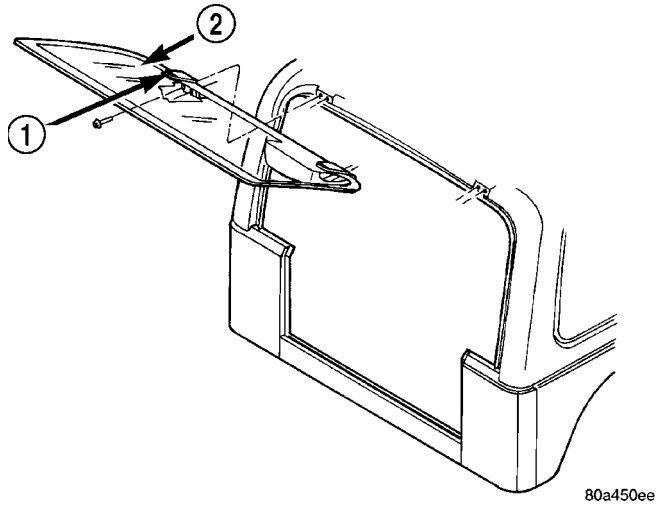

Fig. 4 LIFTGATE HINGE

1 - LIFTGATE HINGE
2 - LIFTGATE GLASS

INSTALLATION

(1) Align and position the hinge on the top and install the bolts.
(2) Install the nut attaching the liftgate hinge to the liftgate glass and tighten to 6 N·m (53 in. lbs.).
(3) Install wiper motor cover. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER MOTOR TRIM COVER - INSTALLATION)
(4) Install the wiper blade. (Refer to 8 - ELECTRICAL/REAR WIPERS/WASHERS/REAR WIPER BLADE - INSTALLATION)

LIFTGATE GLASS

REMOVAL

(1) Disconnect the rear defroster harness connectors.
(2) Disconnect the wiper motor harness connectors.

WARNING: DO NOT REMOVE THE LIFTGATE SUPPORT RODS WITH THE LIFTGATE CLOSED. THE SUPPORT ROD PISTONS ARE OPERATED BY HIGH PRESSURE GAS AND COULD CAUSE PERSONAL INJURY AND/OR VEHICLE DAMAGE IF THEY ARE REMOVED WITH THE PISTONS COMPRESSED (LIFTGATE CLOSED). ONCE REMOVED, DO NOT ATTEMPT TO DISASSEMBLE OR REPAIR THE SUPPORT RODS.

(3) Open the tailgate and liftgate.
(4) Remove support rod cylinders. (Refer to 23 - BODY/TAILGATE/SUPPORT CYLINDER - REMOVAL)
(5) Remove the bolts attaching the liftgate hinge to the hardtop (Fig. 5).
(6) Separate the liftgate glass from the hard top.

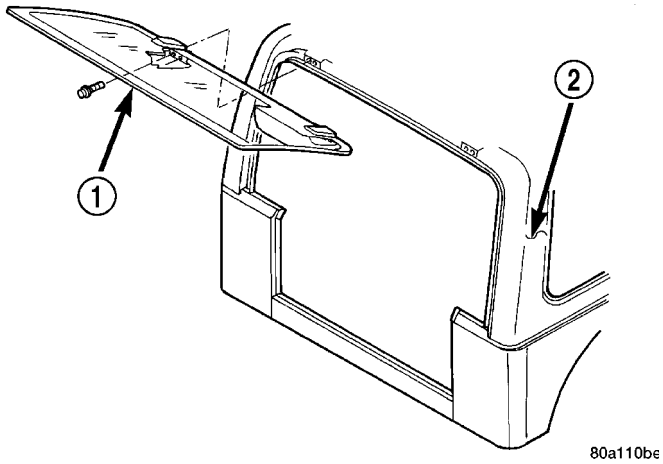

Fig. 5 LIFTGATE GLASS

1 - LIFTGATE REAR WINDOW
2 - HARD TOP