FULL DOOR

TABLE OF CONTENTS

page

DOOR
REMOVAL 18
INSTALLATION 18
ADJUSTMENTS
ADJUSTMENT 18
DOOR GLASS
REMOVAL 19
INSTALLATION 19
WINDOW REGULATOR
REMOVAL 19
INSTALLATION 20
EXTERIOR HANDLE
REMOVAL 20
INSTALLATION 20
GLASS RUN CHANNEL
REMOVAL 21
INSTALLATION 21
HINGE
REMOVAL 21
INSTALLATION 21
INSIDE HANDLE ACTUATOR
REMOVAL 22
INSTALLATION 22
LATCH
REMOVAL 22
INSTALLATION 22
LATCH STRIKER
REMOVAL 23
INSTALLATION 23
LOCK CYLINDER
REMOVAL 23
INSTALLATION 23
TRIM PANEL
REMOVAL 23
INSTALLATION 23

DOOR

REMOVAL

(1) Open the door.
(2) Disconnect the door restraint strap from the pin (Fig. 1).
(3) Remove the nuts at the door hinge pivots and lift the door from the body.

INSTALLATION

(1) Position the door in the hinge and install the nuts.
(2) Connect the door restraint strap at the pin.

ADJUSTMENTS

ADJUSTMENT

The doors are adjusted at the hinge attaching locations on either the body or the door. Enlarged holes are located in the body (lower hinge only) for fore, aft and tilt adjustments. Enlarged holes are also located in the door (upper and lower hinges) for up, down, fore, aft and tilt adjustments.

Prior to door adjustment or alignment, the door latch must be removed to allow the door to close freely and be properly aligned.

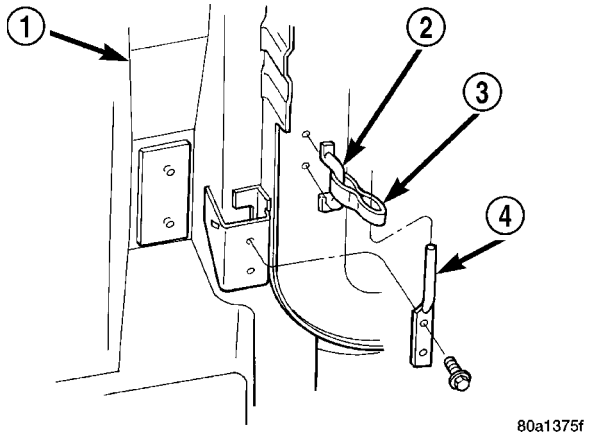

Fig. 1 RESTRAINT STRAP

1 - BODY
2 - FOOTMAN LOOP
3 - STRAP
4 - RESTRAINT PIN

The door latch striker should be adjusted in or out to allow the door latch to be fully engaged. The door should be flush with the adjacent body panels.