DOOR GLASS

REMOVAL

(1) Remove the door trim panel and the waterdam. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - REMOVAL)

(2) Pull the door glass run channel from the door sail.

(3) Roll glass fully downward.

(4) Using a trim stick C-4755 or equivalent, remove the screws and remove the door sail panel (Fig. 2) and (Fig. 3).

(5) Roll glass 1/4 upward to access regulator arm guide.

(6) Remove the screws that attach the regulator arm guide to the glass.

(7) Lift the glass upward while tilting inward and remove from the door.

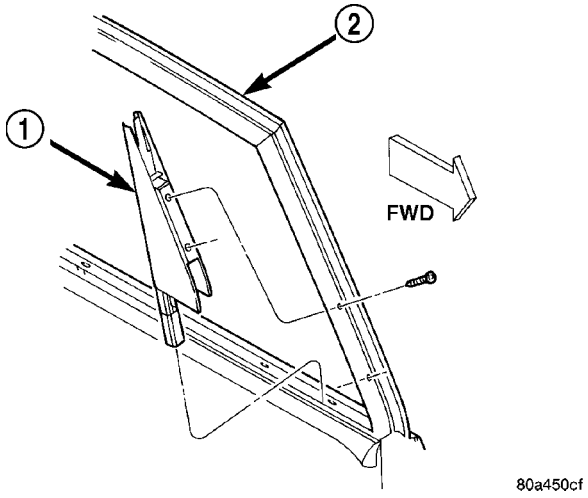

Fig. 2 DOOR SAIL SCREWS

1 - DOOR SAIL
2 - DOOR

INSTALLATION

(1) Position the glass in the door ensuring the glass is aligned in the glass run channel.

(2) Install the screws that attach the regulator arm guide to the glass.

(3) Install the door sail panel.

(4) Install the run channel in the door sail.

(5) Install the waterdam and the door trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - INSTALLATION)

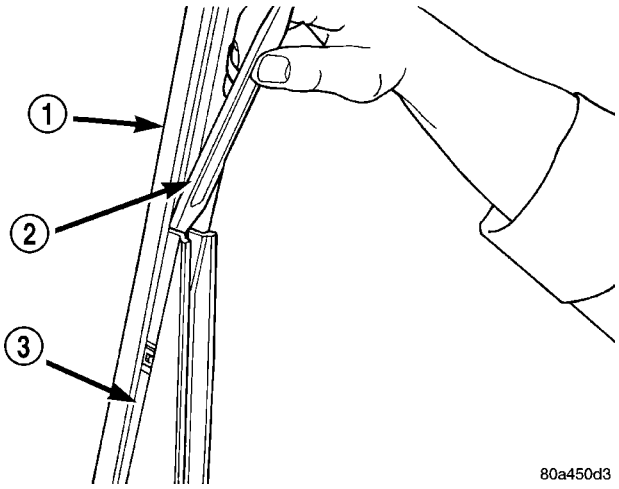

Fig. 3 DOOR SAIL REMOVAL

1 - DOOR FRAME
2 - TRIM STICK
3 - DOOR SAIL

WINDOW REGULATOR

REMOVAL

(1) Remove door glass. (Refer to 23 - BODY/FULL DOOR/DOOR GLASS - REMOVAL)

(2) Loosen the bolts in the slotted holes (Fig. 4).

(3) Remove the bolts attaching the regulator to the door inner panel.

(4) Lift the regulator upward to free it from the slotted holes in the door inner panel.

(5) Lower the regulator and remove it through the access hole in the door inner panel (Fig. 5).

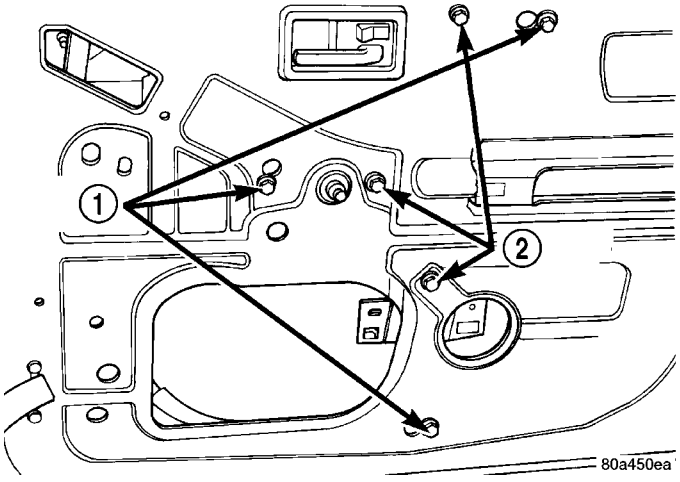

Fig. 4 WINDOW REGULATOR BOLTS

1 - LOOSEN BOLTS
2 - REMOVE BOLTS