WINDOW REGULATOR (Continued)

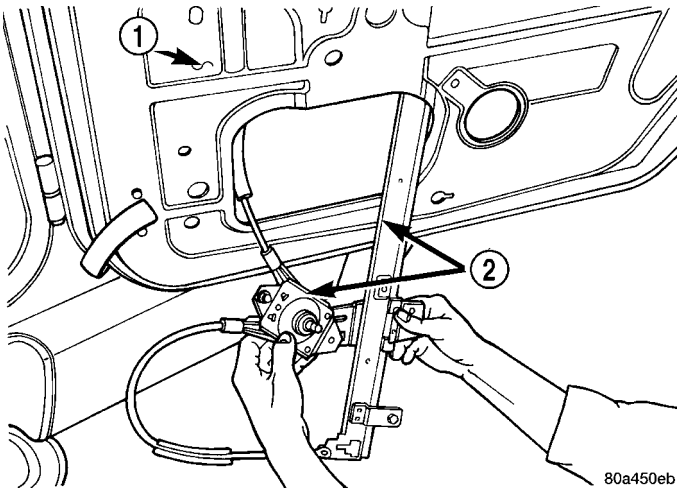

Fig. 5 REGULATOR REMOVAL

1 - DOOR
2 - REGULATOR ASSEMBLY

INSTALLATION

(1) Position the regulator in the door.
(2) Align regulator bolts into slotted holes.
(3) Install bolts attaching regulator to the inner door panel.
(4) Tighten the bolts in the slotted holes.
(5) Install door glass. (Refer to 23 - BODY/FULL DOOR/DOOR GLASS - INSTALLATION)

EXTERIOR HANDLE

REMOVAL

(1) Remove the door trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - REMOVAL)
(2) Position the window in the full upward position.
(3) Remove the grab handle support bracket (Fig. 6).
(4) Peel back the waterdam from the door inner panel to access the door latch.
(5) Disconnect from the latch, the inside lock knob to latch rod and, the outside release handle to latch rod.
(6) Disengage tail of retainer from handle keeper.
(7) Using a long flat blade, tap the handle keepers upward and remove from the door handle (Fig. 7).
(8) Remove the latch release rod from the door handle.
(9) Separate the handle and gasket from the door.

INSTALLATION

(1) Engage the latch release rod to the door handle.
(2) Position the gasket and handle in the door.

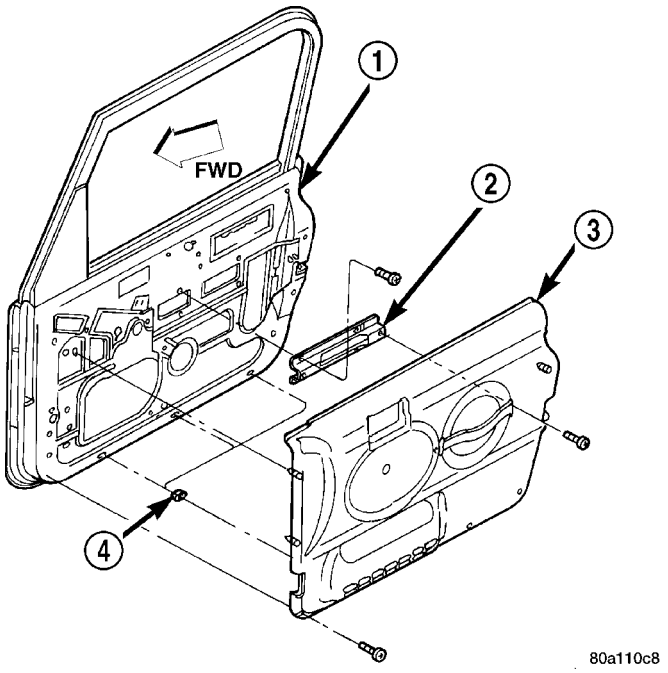

Fig. 6 GRAB HANDLE SUPPORT BRACKET

1 - FULL DOOR
2 - GRAB HANDLE BRACKET
3 - TRIM PANEL
4 - NUT

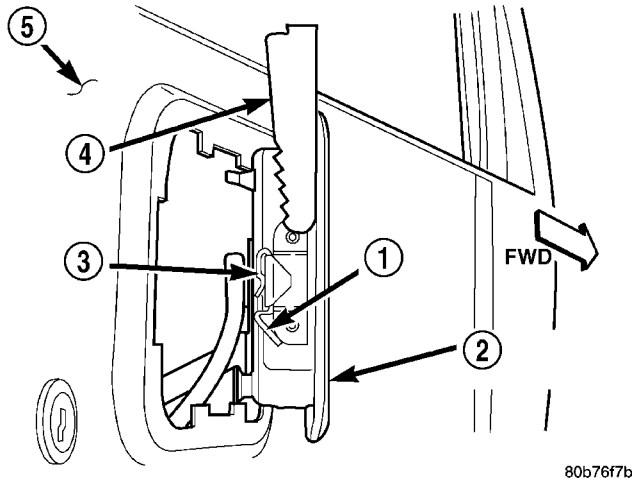

Fig. 7 OUTSIDE DOOR HANDLE REMOVAL

1 - TAIL
2 - OUTSIDE HANDLE
3 - RETAINER
4 - HANDLE KEEPER
5 - DOOR

(3) Slide the keepers into the door handle from the top.
(4) Lower the window.
(5) Using a long flat blade, lightly tap the handle keepers downward to secure the handle. The tail of the retainer must be positioned on the 2nd or 3rd step from the bottom on the handle keeper.
(6) Raise the window.