LATCH STRIKER

REMOVAL

(1) Remove the screws attaching the striker to the body.

(2) Separate the striker and the spacer from the body (Fig. 12).

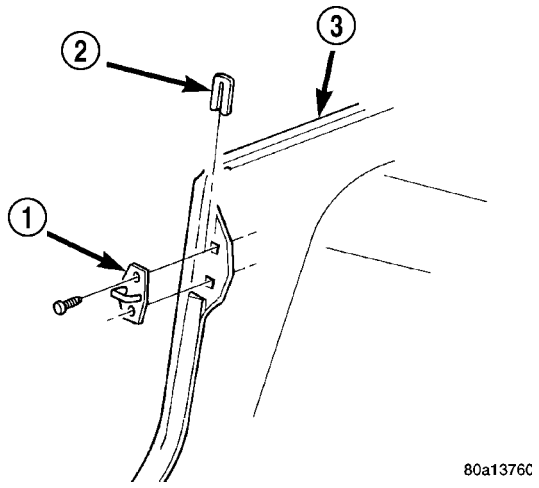

Fig. 12 LATCH STRIKER

1 - STRIKER
2 - SPACER
3 - BODY

INSTALLATION

(1) Position the striker and the spacer on the body.

(2) Install the screws attaching the striker and spacer to the body.

LOCK CYLINDER

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/FULL DOOR/TRIM PANEL - REMOVAL)

(2) Peel back waterdam.

(3) Disconnect lock cylinder to latch rod.

(4) Remove lock cylinder retaining clip.

(5) Remove the lock cylinder from the door.

INSTALLATION

(1) Install the lock cylinder in the door.

(2) Install lock cylinder retaining clip.

(3) Connect lock cylinder to latch rod.

(4) Secure the waterdam to the door.

(5) Install trim panel. (Refer to 23 - BODY/FULL DOOR/LOCK CYLINDER - INSTALLATION)

TRIM PANEL

REMOVAL

(1) Lower the window.

(2) Remove the clip attaching the window glass regulator handle to the regulator. Remove the handle.

(3) Remove the screws attaching trim panel to door (Fig. 13).

(4) Using a special tool C-4829 or equivalent, remove push-in fasteners attaching trim panel to door.

(5) Lift the trim panel upward and separate the trim panel from the door.

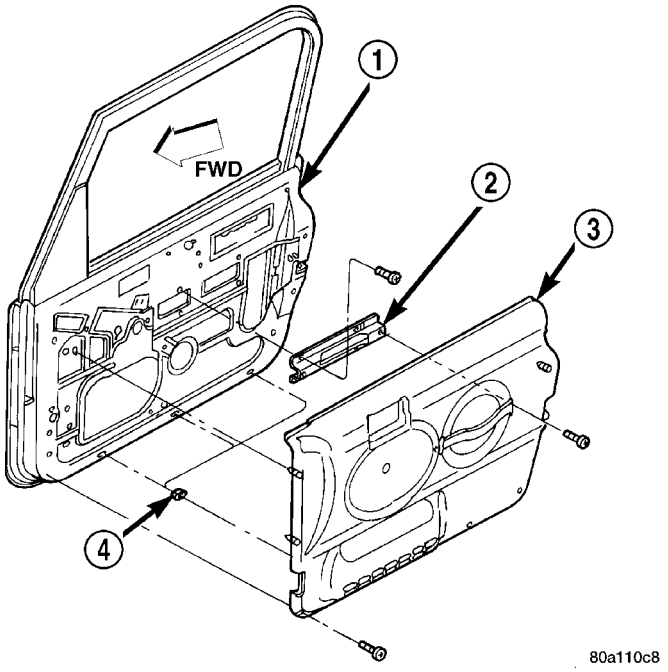

Fig. 13 FULL

1 - FULL DOOR
2 - GRAB HANDLE BRACKET
3 - TRIM PANEL
4 - NUT

INSTALLATION

(1) Position the trim panel on the door.

(2) Press the push-in fasteners attaching trim panel to door into place.

(3) Install the screws attaching trim panel to door.

(4) Position the clip on regulator handle and install the handle on the regulator.