EXTERIOR HANDLE

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - REMOVAL)
(2) Disconnect the outside handle to latch rod.
(3) Remove screws attaching the outside handle to the door.
(4) Separate the outside handle and seal from the door.

INSTALLATION

(1) Position the outside handle and seal in the door.
(2) Install screws attaching the outside handle to the door.
(3) Connect the outside handle to latch rod.
(4) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

HINGE

DESCRIPTION

The service procedures for the half door hinge are the same as the full door hinge. (Refer to 23 - BODY/FULL DOOR/HINGE - REMOVAL) and (Refer to 23 - BODY/FULL DOOR/HINGE - INSTALLATION).

INSIDE HANDLE ACTUATOR

REMOVAL

(1) Remove the torx screw attaching the inside handle to the door.
(2) Carefully pull handle from door.
(3) Disconnect the latch rods from the handle (Fig. 3).

INSTALLATION

(1) Connect the latch rods to the handle.
(2) Position handle and seal in door.
(3) Install the torx screw attaching the inside handle the to door.

LATCH

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - REMOVAL)
(2) Disconnect the lock cylinder to latch rod (Fig. 4).
(3) Disconnect the lock knob to latch rod.
(4) Disconnect the outside handle to latch rod.

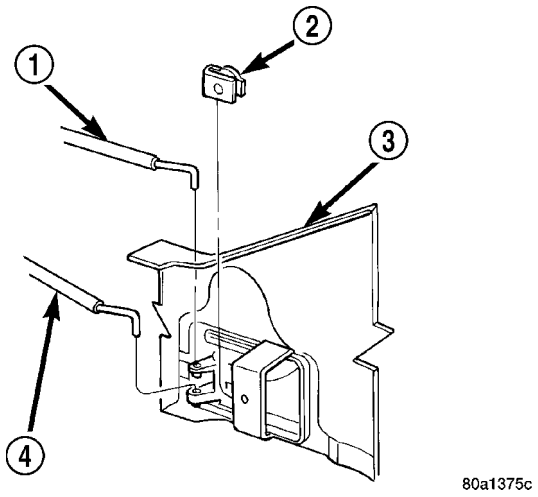

Fig. 3 INSIDE HANDLE ACTUATOR

1 - LOCK KNOB TO LATCH ROD
2 - U-NUT
3 - HALF DOOR TRIM PANEL
4 - INSIDE RELEASE HANDLE TO LATCH ROD

(5) Using a trim stick or equivalent, pry back the door weatherstrip at the latch to access the screw attaching the latch to the door.
(6) Remove the screws attaching the latch to the door (Fig. 5).
(7) Lower the latch in the door and disconnect the inside handle to latch rod.
(8) Remove the latch from the door.

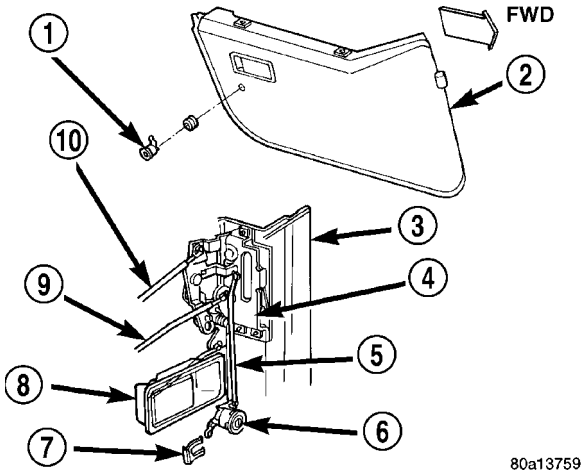

Fig. 4 HALF DOOR LATCH RODS

1 - LOCK CYLINDER
2 - HALF DOOR
3 - HALF DOOR
4 - LATCH
5 - LOCK CYLINDER TO LATCH ROD
6 - LOCK CYLINDER
7 - RETAINER
8 - OUTSIDE HANDLE
9 - INSIDE HANDLE TO LATCH ROD
10 - INSIDE LOCK TO LATCH ROD