LATCH (Continued)

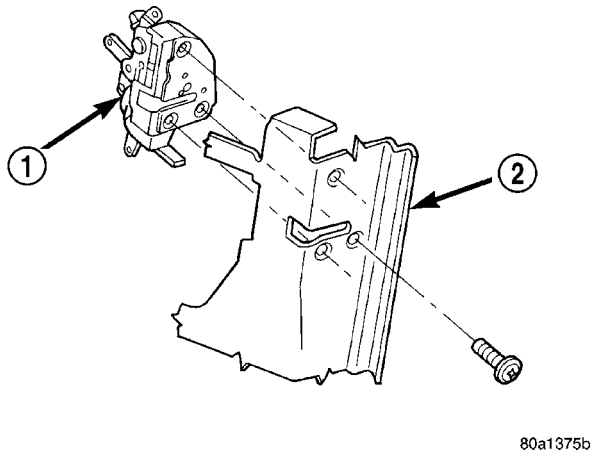

Fig. 5 DOOR LATCH

1 - LATCH
2 - HALF DOOR

INSTALLATION

(1) Position the latch in the door.
(2) Connect the inside handle to latch rod.
(3) Install the screws attaching the latch to the door.
(4) Position the door weatherstrip in place, apply adhesive as necessary.
(5) Connect the outside handle to latch rod.
(6) Connect the lock knob to latch rod.
(7) Connect the lock cylinder to latch rod (Fig. 4).
(8) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

LATCH STRIKER

REMOVAL

(1) Remove the screws attaching the striker to the body.
(2) Separate the striker and the spacer from the body (Fig. 6).

INSTALLATION

(1) Position the striker and the spacer on the body.
(2) Install the screws attaching the striker and spacer to the body.

LOCK CYLINDER

REMOVAL

(1) Remove trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - REMOVAL)
(2) Disconnect lock cylinder to latch rod (Fig. 4).
(3) Remove lock cylinder retaining clip.
(4) Remove the lock cylinder from the door.

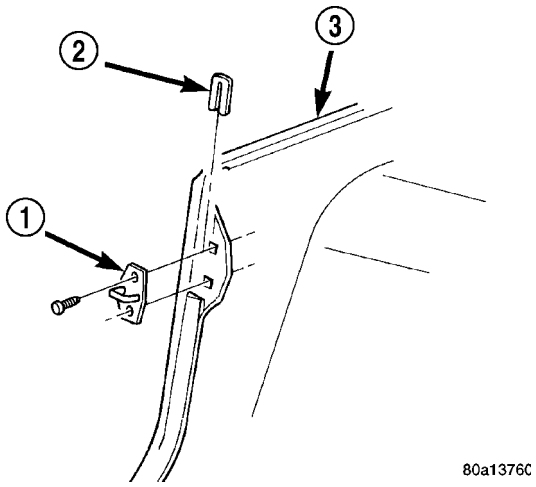

Fig. 6 LATCH STRIKER

1 - STRIKER
2 - SPACER
3 - BODY

INSTALLATION

(1) Install the lock cylinder in the door.
(2) Install lock cylinder retaining clip.
(3) Connect lock cylinder to latch rod.
(4) Install trim panel. (Refer to 23 - BODY/HALF DOOR/TRIM PANEL - INSTALLATION)

TRIM PANEL

REMOVAL

(1) Remove half door window. (Refer to 23 - BODY/HALF DOOR/WINDOW - REMOVAL)
(2) Rotate window retainer sleeves 90°. Using a trim stick C-4755 or equivalent, pry sleeve retainers from door.
(3) Remove the screws attaching trim panel to door.
(4) Using a trim stick C-4829 or equivalent, remove push-in fasteners attaching trim panel to door.
(5) Separate the trim panel from the door.

INSTALLATION

(1) Position the trim panel on the door.
(2) Press the push-in fasteners attaching trim panel to door into place.
(3) Install the screws attaching trim panel to door.
(4) Position retainer sleeves into door. Rotate retainer sleeves 90° to secure into place.
(5) Install half door window. (Refer to 23 - BODY/HALF DOOR/WINDOW - INSTALLATION)