WHEEL OPENING FLARE MOLDING (Continued)

(2) Clean the contact surface on the flare and position it on the front fender or wheelhouse.

(3) Install the screws attaching the flares to the front fender or wheelhouse.

(4) If removed, install the side marker lamp.

EXHAUSTER

REMOVAL

(1) Remove the spare tire carrier. (Refer to 22 - TIRES/WHEELS/TIRES/SPARE TIRE CARRIER - REMOVAL)

(2) Using a trim stick C-4755 or equivalent, separate the exhauster from the tailgate. (Fig. 8)

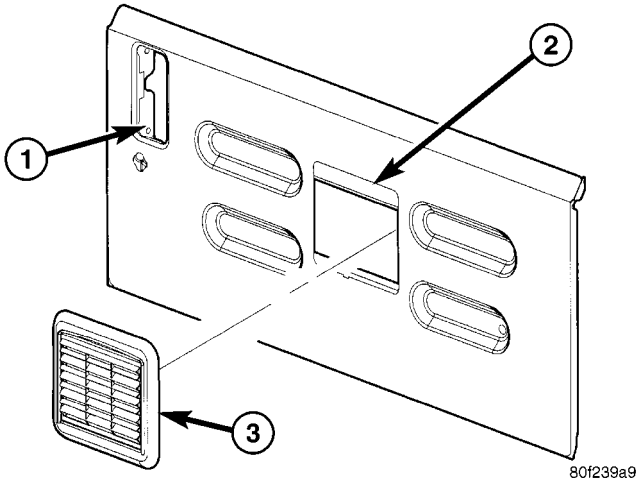

Fig. 8 BODY EXHAUSTER

1 - TAILGATE HANDLE
2 - EXHAUSTER OPENING
3 - EXHAUSTER

INSTALLATION

(1) Install the exhauster and seat fully.

(2) Install the spare tire carrier. (Refer to 22 - TIRES/WHEELS/TIRES/SPARE TIRE CARRIER - INSTALLATION)

BODY SIDE GUARD

REMOVAL

(1) Remove the bolts from the lower support tabs. (Fig. 9)

(2) Remove the side bolts and remove the side guard. (Fig. 10)

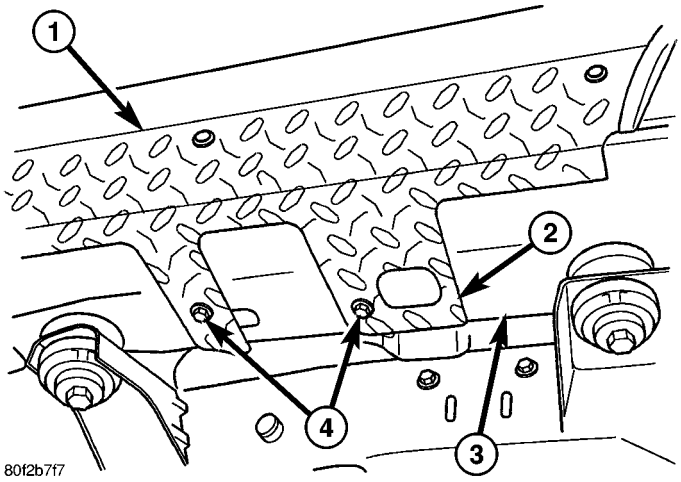

Fig. 9 SIDE GUARD - LOWER

1 - BODY SIDE GUARD
2 - SUPPORT TABS (5)
3 - BODY FLOOR SILL
4 - BOLTS (5)

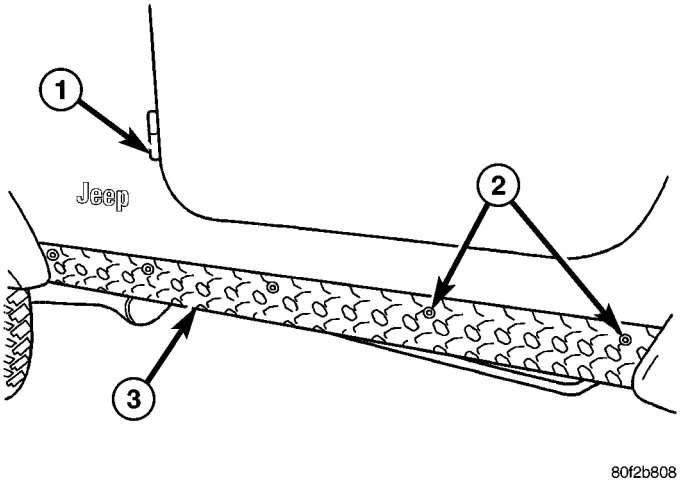

Fig. 10 SIDE GUARD - UPPER

1 - DOOR
2 - SIDE GUARD BOLTS (5)
3 - BODY SIDE GUARD

INSTALLATION

(1) Install the body side guard and install the side bolts.

(2) Tighten the bolts to 5 N·m (45 in. lbs.).

(3) Install the support tab bolts and tighten to 11 N·m (8 ft. lbs.).