SIDE STEP

REMOVAL

(1) Remove the bolts that attach the side step to the frame (Fig. 11).

(2) Tilt the step down and disengage the tabs from the frame slots.

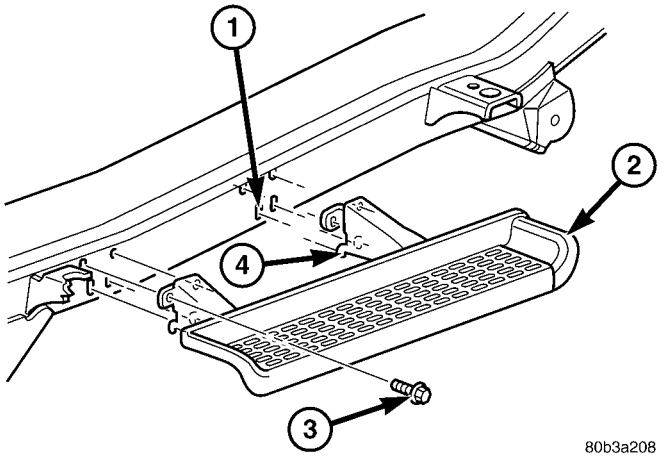

Fig. 11 SIDE STEP

1 - FRAME SLOTS
2 - SIDE STEP
3 - BOLTS
4 - STEP MOUNTING TABS

INSTALLATION

(1) Position the side step on the frame and engage the mounting tabs into the frame slots.

(2) Install the bolts that attach the side step to the frame and tighten to 21 N·m (15 ft. lbs.).

LICENSE PLATE BRACKET

REMOVAL

(1) If installed, remove the license plate.

(2) Remove the four screws attaching the license plate bracket to the body (Fig. 12).

(3) On export models remove the bolts and nuts. (Fig. 13)

(4) Separate the bracket from the body.

(5) Disconnect the electrical connectors, if equipped.

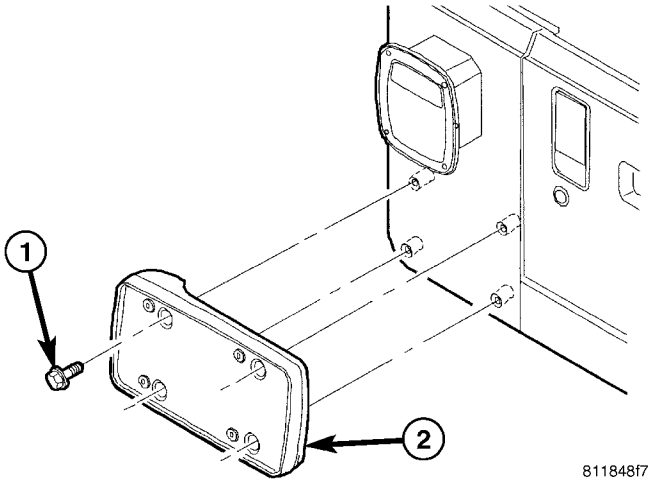

Fig. 12 LICENSE PLATE BRACKET

1 - BOLTS (4)
2 - BRACKET

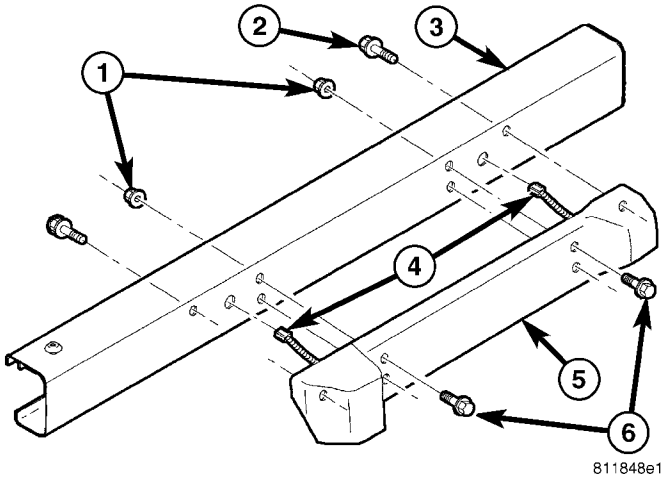

Fig. 13 LICENSE PLATE BRACKET - EXPORT

1 - NUTS (4)
2 - BOLTS (2)
3 - BUMPER
4 - ELECTRICAL CONNECTORS
5 - LICENSE PLATE BRACKET
6 - BOLTS (4)

INSTALLATION

(1) Connect the electrical connectors, if equipped.

(2) Position the bracket on the body.

(3) Install the four screws attaching the license plate bracket to the body.

(4) On export models, install the six bolts and four nuts.

(5) If removed, install the license plate.