HOOD

TABLE OF CONTENTS

	page
HINGE	
REMOVAL	35
INSTALLATION	35
HOOD	
REMOVAL	36
INSTALLATION	36
ADJUSTMENTS	
ADJUSTMENT	36
HOOD SAFETY LATCH	
REMOVAL	36
INSTALLATION	36

HINGE

REMOVAL

(1) Remove the wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - REMOVAL)

(2) Remove the cowl panel and screen. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - REMOVAL)

(3) Remove the bolts attaching the hinge to the cowl.

(4) Using a wax pencil, mark the position of the hinge on the hood for installation alignment reference.

(5) Remove the screws attaching the hinge to the hood (Fig. 1).

(6) Separate the hinge from the hood.

INSTALLATION

(1) Prepare and paint the replacement hinge to match the body paint color.

(2) Align the hinge with the installation reference marks on the hood

(3) Install the screws attaching the hinge to the hood and cowl and tighten the to 24 N·m (18 ft. lbs.).

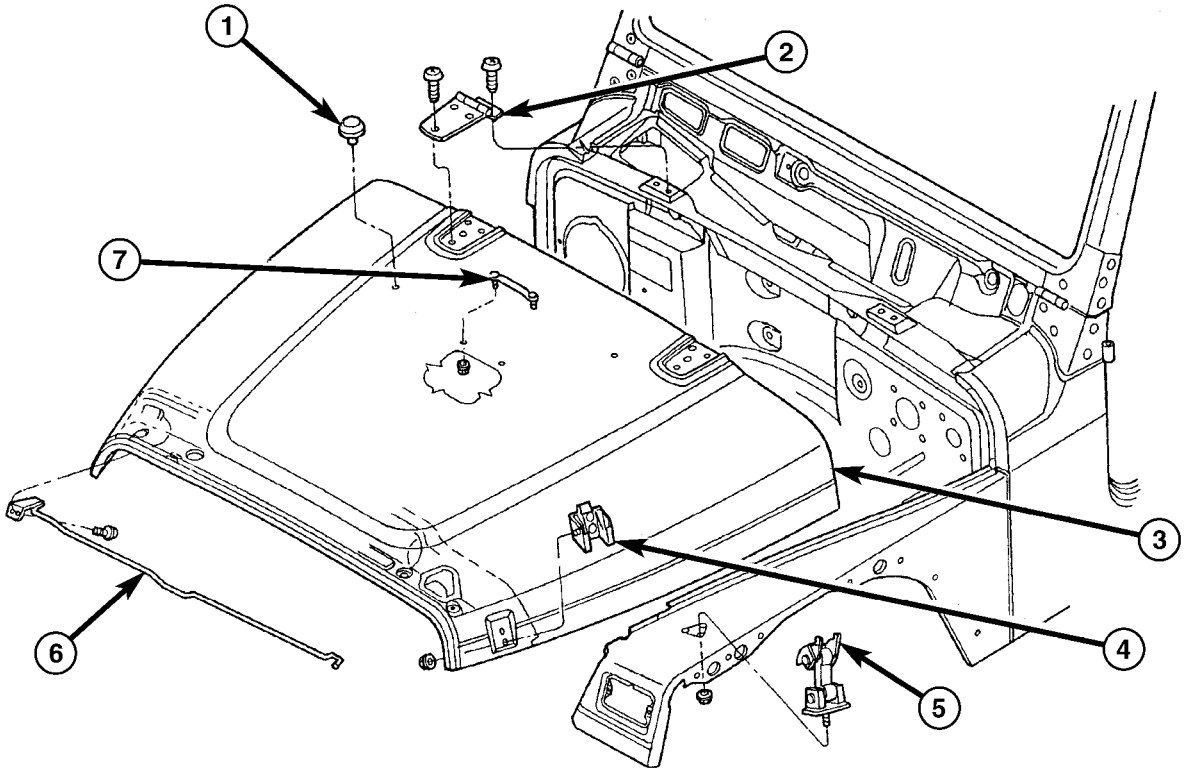

Fig. 1 HOOD COMPONENTS

1 - WINDSHIELD REST BUMPER
2 - HOOD HINGE
3 - HOOD
4 - HOOD CATCH BRACKET
5 - HOOD CATCH
6 - PROP ROD
7 - WINDSHIELD HOOD DOWN LOOP