HINGE (Continued)

(4) Install the bolts attaching the hinge to the cowl.

(5) Install the cowl panel and screen. (Refer to 23 - BODY/EXTERIOR/COWL GRILLE AND SCREEN - INSTALLATION)

(6) Install the wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - INSTALLATION)

HOOD

REMOVAL

(1) Raise and support the hood.

(2) Disconnect the underhood lamp wire harness connector.

(3) Disconnect the windshield washer nozzles.

(4) Disconnect the ground strap.

(5) Mark the position of the hinges on the hood for installation alignment reference.

(6) Remove the screws attaching the hood to the hinge and remove the hood (Fig. 1).

(7) If the hood must be replaced, remove and transfer the insulator panel, hinges, latches, bumpers, brackets, footman loop, hood lamp, support rod, and safety latch to the replacement hood (Fig. 1).

INSTALLATION

(1) Position the hood on the vehicle and install the screws attaching the hinge to the hood.

(2) Align the hinges with the installation reference marks on the hood and tighten the hinge screws to 24 N·m (18 ft. lbs.).

(3) Connect the underhood lamp wire harness connector.

(4) Connect the windshield washer nozzles.

(5) Connect the ground strap.

ADJUSTMENTS

ADJUSTMENT

The hood hinge screw holes are oversized to facilitate hood adjustment movement.

(1) Loosen the screws.

(2) Move the hood in the direction(s) required for correct alignment.

(3) Tighten the screws.

HOOD SAFETY LATCH

REMOVAL

(1) Raise and support the hood.

(2) Remove the bolt attaching the safety latch to the hood (Fig. 2).

(3) Remove the latch from the hood.

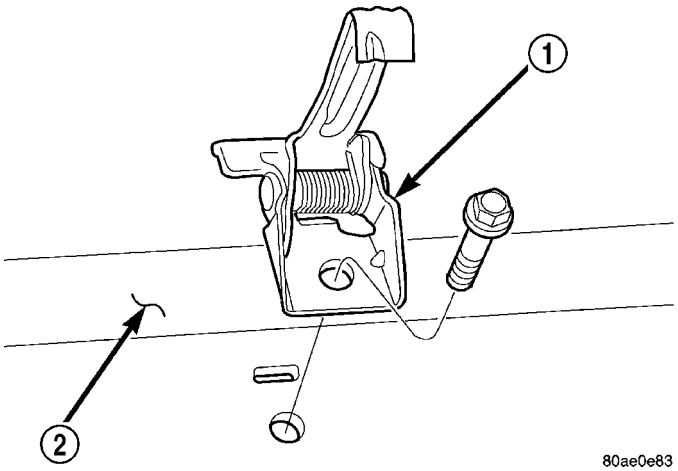

Fig. 2 HOOD SAFETY LATCH

1 - SAFETY LATCH
2 - HOOD

INSTALLATION

(1) Position the latch on the hood.

(2) Install the bolt attaching the safety latch to the hood and tighten to 9 N·m (80 in. lbs.).

(3) Remove the support rod and close the hood.