INSTRUMENT PANEL

TABLE OF CONTENTS

page

ACCESSORY SWITCH BEZEL
REMOVAL 37
INSTALLATION 38
AXLE LOCK SWITCH
DESCRIPTION 38
OPERATION 38
DIAGNOSIS AND TESTING - AXLE LOCK SWITCH 38
REMOVAL 39
INSTALLATION 39
BASE TRIM
REMOVAL 40
INSTALLATION 40
CENTER BEZEL
REMOVAL 41
INSTALLATION 41
CLUSTER BEZEL
REMOVAL 42
INSTALLATION 42
GLOVE BOX
REMOVAL 43
DISASSEMBLY 43
ASSEMBLY 44
INSTALLATION 44
GLOVE BOX CHECK STRAP
REMOVAL 45
INSTALLATION 45
GLOVE BOX LATCH STRIKER
REMOVAL 45
INSTALLATION 46
GRAB HANDLE
REMOVAL 46
INSTALLATION 46
GRAB HANDLE BEZEL
REMOVAL 47
INSTALLATION 47
INSTRUMENT PANEL ASSEMBLY
REMOVAL 48
INSTALLATION 49
STEERING COLUMN OPENING COVER
REMOVAL 50
INSTALLATION 50
TOP COVER
REMOVAL 51
INSTALLATION 51

ACCESSORY SWITCH BEZEL

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the center bezel from the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ CENTER BEZEL - REMOVAL).

(3) Remove the four screws that secure the accessory switch bezel to the instrument panel (Fig. 1).

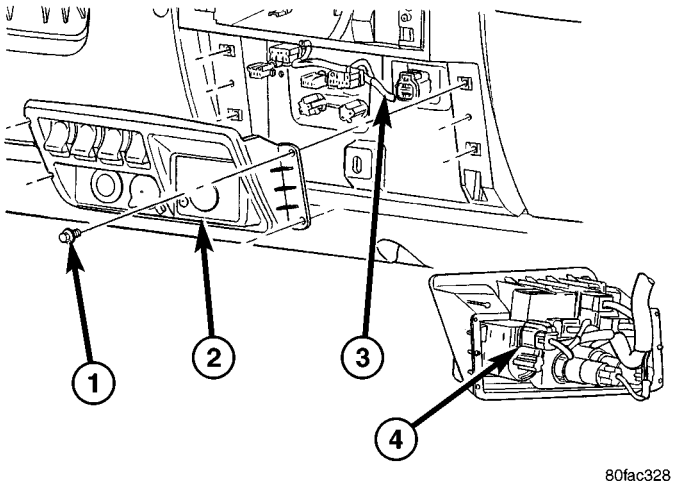

Fig. 1 ACCESSORY SWITCH BEZEL

1 - BEZEL SCREWS (4)
2 - BEZEL
3 - WIRE HARNESS
4 - ELECTRICAL CONNECTORS (7)