AXLE LOCK SWITCH (Continued)

(5) Turn the ignition to the OFF position. Disconnect and isolate the negative battery cable. Remove the Instrument Cluster. Disconnect the cluster harness connectors C1 and C2. Check for continuity between each of the Enable circuits and each of the request circuits between the switch harness connector and the cluster harness connectors. If OK go to step 6. If not OK, repair the circuits as required.

(6) Turn the ignition to the OFF position. Disconnect and isolate the negative battery cable. Remove the axle Lock switch. Disconnect the switch harness connector. Check for continuity between each of the Request circuits, between the switch harness connector and each of the Locker relays in the PDC. If OK, refer to Axle Lock Indicator Problems in the Instrument Cluster section of the appropriate Body Manual or the Chassis Diagnostic Manual and perform the appropriate symptom. If not OK, repair the circuit(s) as required.

REMOVAL

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, DRIVER AIRBAG, PASSENGER AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the accessory switch bezel from the instrument panel center bezel from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/ ACCESSORY SWITCH BEZEL - REMOVAL)

(3) Using a trim stick or another suitable wide flat-bladed tool, gently pry the latch tabs at the top and bottom of the axle lock switch on the back of the accessory switch bezel far enough to disengage the snap features on the switch housing then pull the switch out of the receptacle (Fig. 2).

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, DRIVER AIRBAG, PASSENGER AIRBAG, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE SUPPLEMENTAL RESTRAINT SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

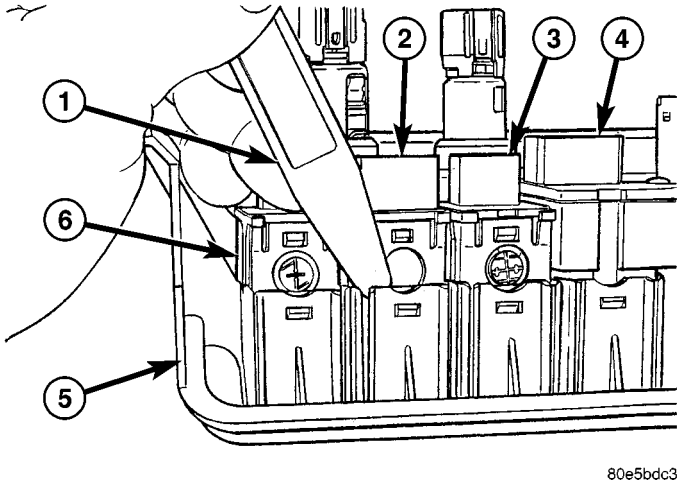

Fig. 2 ACCESSORY SWITCH REMOVE

1 - TRIM STICK
2 - REAR WIPER/WASHER SWITCH
3 - OVERDRIVE-OFF SWITCH
4 - AXLE LOCKER SWITCH
5 - ACCESSORY SWITCH BEZEL
6 - REAR WINDOW DEFOGGER SWITCH

(1) Position the axle lock switch over the proper receptacle on the back of the accessory switch bezel (Fig. 2).

(2) Evenly push the axle lock switch into the receptacle until the snap features on the top and bottom of the switch housing are fully engaged to the receptacle.

(3) Reinstall the accessory switch bezel onto the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/ACCESSORY SWITCH BEZEL - INSTALLATION).

(4) Reconnect the battery negative cable.