GLOVE BOX (Continued)

(3) Remove the four screws that secure the glove box latch and handle to the glove box door from the inside of the glove box.

(4) Remove the latch and handle from the inside of the glove box door.

GLOVE BOX LOCK CYLINDER

(1) Remove the glove box latch and handle unit from the glove box. Refer to GLOVE BOX LATCH AND HANDLE.

(2) Insert the key into the glove box lock cylinder.

(3) Insert a small screwdriver into the retaining tumbler release slot and depress the retaining tumbler (Fig. 8).

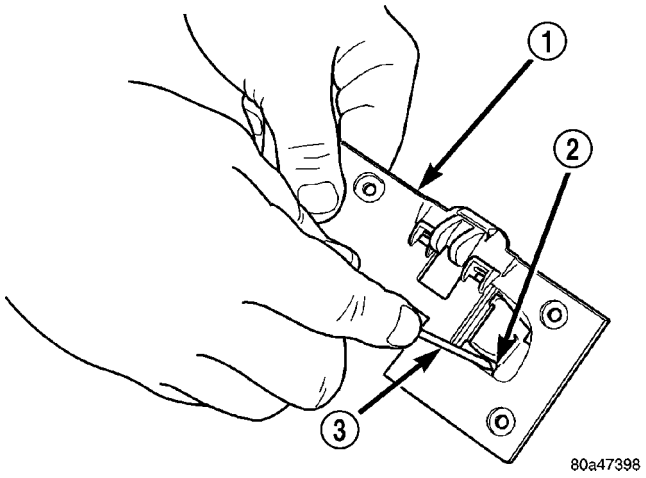

Fig. 8 GLOVE BOX LOCK CYLINDER REMOVE/ INSTALL

1 - GLOVE BOX LATCH
2 - RELEASE SLOT
3 - SMALL SCREWDRIVER

(4) Using a gentle twisting and pulling action with the key, pull the lock cylinder out of the glove box latch and handle unit.

ASSEMBLY

Some of the components of the glove box used in this vehicle are serviced individually. The serviced components include the glove box latch and handle unit, and the glove box lock cylinder (Fig. 7). Following are the procedures for assembling these components onto the glove box.

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

GLOVE BOX LATCH AND HANDLE

(1) Position the latch and handle onto the inside of the glove box door.

(2) Install and tighten the four screws that secure the glove box latch and handle to the glove box door from the inside of the glove box. Tighten the screws to 2 N·m (20 in. lbs.).

(3) Reinstall the glove box onto the instrument panel. (Refer to 23 - BODY/INSTRUMENT PANEL/ GLOVE BOX - INSTALLATION).

(4) Reconnect the battery negative cable.

GLOVE BOX LOCK CYLINDER

(1) Insert the key into the glove box lock cylinder.

(2) Using a gentle twisting and pushing action on the key, push the lock cylinder into the glove box latch and handle unit.

(3) Reinstall the glove box latch and handle onto the glove box. Refer to GLOVE BOX LATCH AND HANDLE.

INSTALLATION

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, DISABLE THE AIRBAG SYSTEM BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. DISCONNECT AND ISOLATE THE BATTERY NEGATIVE (GROUND) CABLE, THEN WAIT TWO MINUTES FOR THE AIRBAG SYSTEM CAPACITOR TO DISCHARGE BEFORE PERFORMING FURTHER DIAGNOSIS OR SERVICE. THIS IS THE ONLY SURE WAY TO DISABLE THE AIRBAG SYSTEM. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Position the glove box to the instrument panel.

(2) Engage the hinge hook formations on the lower edge of the glove box door with the hinge pins on the lower edge of the instrument panel.

(3) Tilt the upper edge of the glove box door up toward the instrument panel far enough to engage the check strap with the door (Fig. 6).

(4) While supporting the glove box door with one hand, grasp the check strap as close to the glove box door as possible and slide the rolled end of the check strap into the slot in the edge of the door.

(5) Close and latch the glove box door.

(6) Reconnect the battery negative cable.