SHIFT BOOT

REMOVAL

(1) Using a trim stick C-4755 or equivalent, pry the shift boot from the bezel.

(2) Using a small flat blade, pry the shift pattern insert from the shift knob.

(3) Remove the nut attaching the shift knob to the shift lever (Fig. 7).

(4) Remove the knob and slide the shift boot from the shift lever.

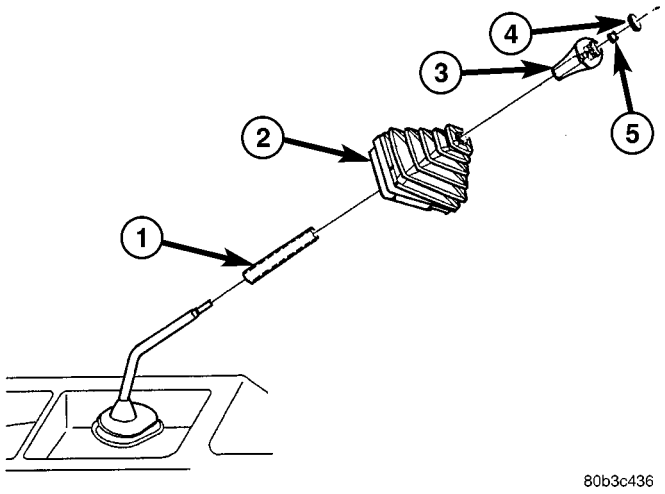

Fig. 7 SHIFT BOOT

1 - BOOT SUPPORT TUBE
2 - SHIFT BOOT
3 - SHIFT KNOB
4 - SHIFT PATTERN CAP
5 - NUT

INSTALLATION

(1) Slide the shift boot over the shift lever.

(2) Snap the shift boot into place in the center console.

(3) Position the shift knob on the lever, install the nut and tighten to 34 N·m (25 ft. lbs.).

(4) Position the shift pattern insert on the knob and press into place.

CENTER CONSOLE

REMOVAL

(1) Remove the cup holder, if equipped. (Refer to 23 - BODY/INTERIOR/CENTER CONSOLE CUPHOLDER ASSEMBLY - REMOVAL)

(2) On full console models remove the trim disc from the bottom of the cup holder (Fig. 10).

(3) Remove the automatic transmission shift bezel, if equipped. (Refer to 23 - BODY/INTERIOR/SHIFT BEZEL - REMOVAL)

(4) Using a trim stick C-4755 or equivalent, remove the air bag deactivation switch and disconnect the electrical connector, if equipped.

(5) Remove the bolt(s) attaching the console to the floor pan (Fig. 8) and (Fig. 9).

(6) Shift transfer case to four low position.

(7) Shift transmission to L (2nd gear for manual transmission) and remove the console assembly.

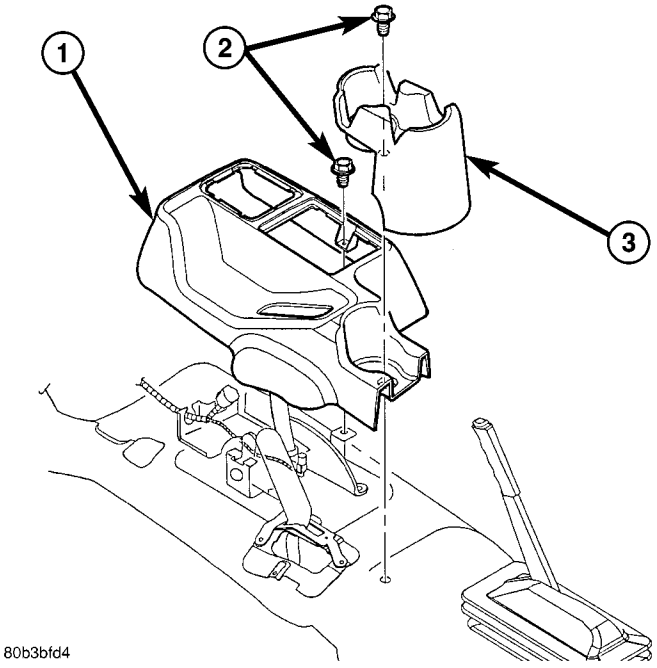

Fig. 8 MINI CONSOLE

1 - MINI CONSOLE
2 - BOLTS
3 - CUPHOLDER