HARD TOP

REMOVAL

(1) Disengage latches at windshield frame (Fig. 1).

NOTE: The two forward bolts/nuts are not captured. Do not lose the nuts when removing.

(2) Remove the six bolts that attach the hard top to the body (Fig. 2).

(3) Depress tab on rear wiper motor connector and pull downward to disengage (Fig. 3).

(4) Disconnect the rear washer fluid hose. Cap the hose to prevent washer fluid leakage (Fig. 4).

CAUTION: Protect the lower edges of the top from potential damage, cracks, paint chips, gouges and scratches that are not covered under warranty.

(5) Carefully remove the hard top assembly from the vehicle.

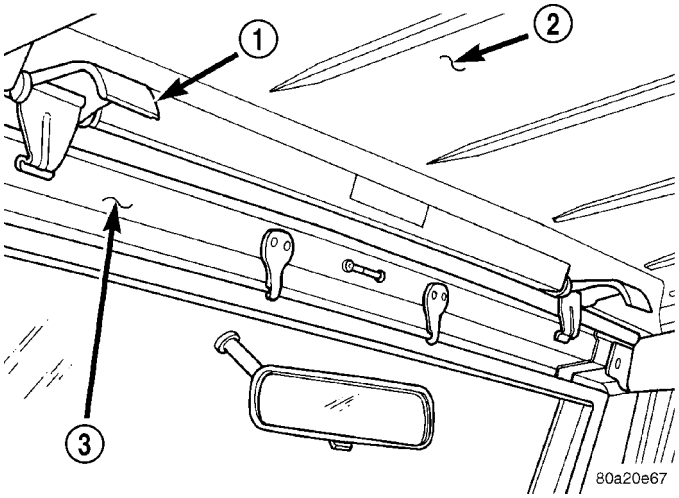

Fig. 1 HARD TOP LATCH

1 - LATCH
2 - HARD TOP
3 - WINDSHIELD FRAME

INSTALLATION

(1) Inspect the hard top seals for damage and replace, if necessary.

(2) Inspect the windshield header seal and make sure it is clean, undamaged, and free of debris.

(3) Carefully position the hard top assembly on the vehicle making sure that the latches are not pinched between the windshield frame and top.

CAUTION: Do not over tighten the top bolts. Over tightening can cause cracking of the hardtop assembly.

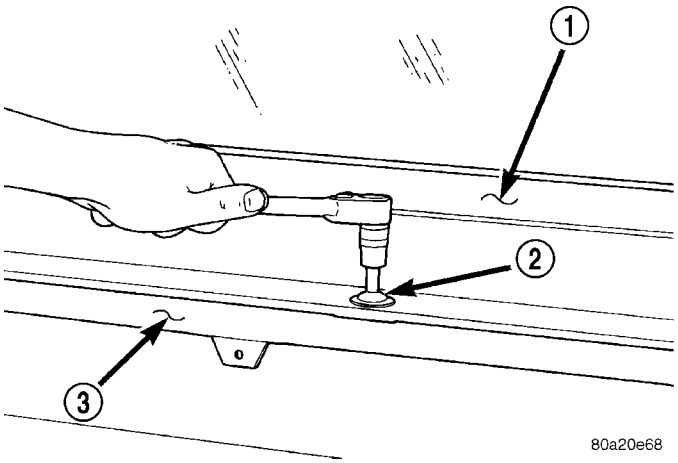

Fig. 2 HARD TOP REMOVAL

1 - HARD TOP
2 - HOLD DOWN BOLT
3 - BODY RAIL

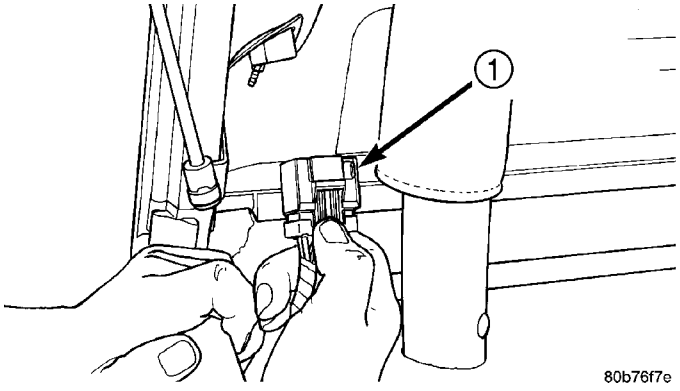

Fig. 3 REAR WIPER WIRE HARNESS CONNECTOR

1 - WIPER MOTOR CONNECTOR

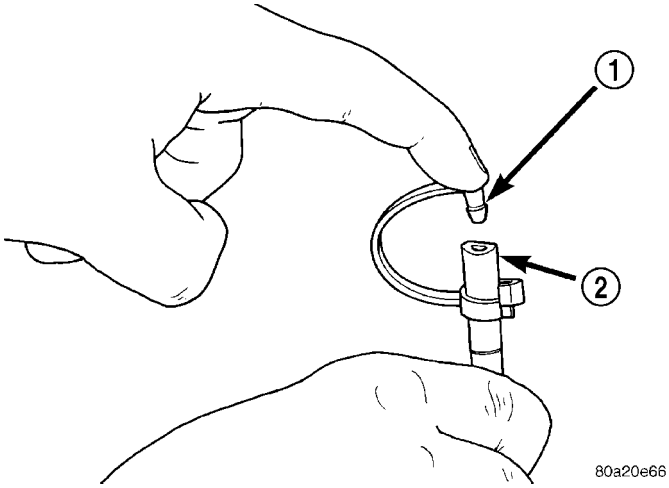

Fig. 4 REAR WASHER FLUID TUBE

1 - WASHER HOSE CAP
2 - REAR WASHER SUPPLY HOSE - BODY HALF