DOOR OPENING FRAME

REMOVAL

Vehicles equipped with a soft top require a door opening frame to complete the seal for the soft top door assembly.

(1) Lower the top to the rearward position.

(2) Turn the knobs located on top of the door opening frame counter clockwise and remove completely (Fig. 8).

(3) Pull door opening frame outward and up. Separate from vehicle.

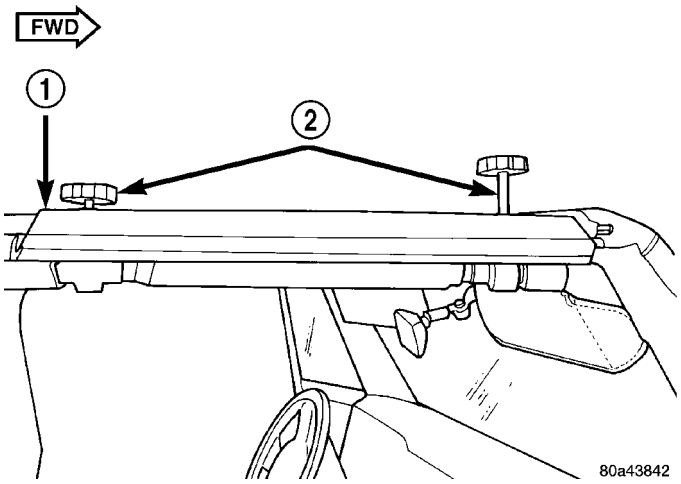

Fig. 8 DOOR OPENING FRAME

1 - DOOR OPENING FRAME
2 - KNOBS

INSTALLATION

Vehicles equipped with a soft top require a door opening frame to complete the seal for the soft top door assembly.

(1) Install the alignment pin at the base of the door opening frame into the hole at the top of the quarter panel.

(2) Position the door opening frame on the side support bar and install the knobs.

(3) Raise and secure the top.

HARD/SOFT TOP LATCH

REMOVAL

(1) Unlatch the top (Fig. 9).

(2) Using a grease pencil or equivalent, mark the position of the latch on the top.

(3) Remove the screws attaching the latch to the top.

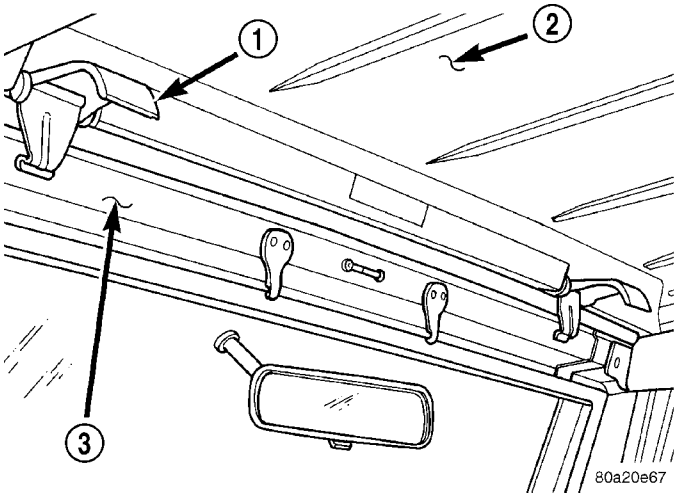

Fig. 9 HARD/SOFT TOP LATCH

1 - LATCH
2 - HARD TOP
3 - WINDSHIELD FRAME

INSTALLATION

(1) Position the latch on the top and install the screws.