SEATS

TABLE OF CONTENTS

page

FRONT SEAT
REMOVAL 71
INSTALLATION 71
FRONT SEAT BACK
REMOVAL 72
INSTALLATION 72
FRONT SEAT BACK COVER
REMOVAL 73
INSTALLATION 73
FRONT SEAT CUSHION COVER
REMOVAL 73
INSTALLATION 73
FRONT SEAT BACK RECLINER/COVER
REMOVAL 73
INSTALLATION 73
FRONT SEAT BACK RECLINER CABLE
REMOVAL 74
INSTALLATION 74
FRONT SEAT FOLDING RELEASE CABLE
REMOVAL 74
INSTALLATION 75
FRONT SEAT BACK DUMP CABLE
REMOVAL 75
INSTALLATION 75

page

FRONT SEAT TRACK ADJUSTER
REMOVAL 76
INSTALLATION 76
REAR SEAT
REMOVAL 77
INSTALLATION 77
REAR SEAT BACK
REMOVAL 77
INSTALLATION 77
REAR SEAT BACK HINGE
REMOVAL 78
INSTALLATION 78
REAR SEAT BACK COVER
REMOVAL 78
INSTALLATION 78
REAR SEAT CUSHION COVER
REMOVAL 79
INSTALLATION 79
REAR SEAT RELEASE CABLE
REMOVAL 79
INSTALLATION 79
REAR SEAT STRIKERS
REMOVAL 80
INSTALLATION 80

FRONT SEAT

REMOVAL

(1) Disengage seat belt electrical connector (Fig. 1).
(2) Remove the bolts attaching the seat adjuster to the floor panel (Fig. 2).
(3) Remove the seat from the vehicle.

INSTALLATION

(1) Position the seat in the vehicle.
(2) Install the bolts attaching the rear of seat frame to the floor panel. Tighten outboard bolt to 33 N·m (25 ft. lbs.). Tighten inboard bolt to 74 N·m (55 ft. lbs.).

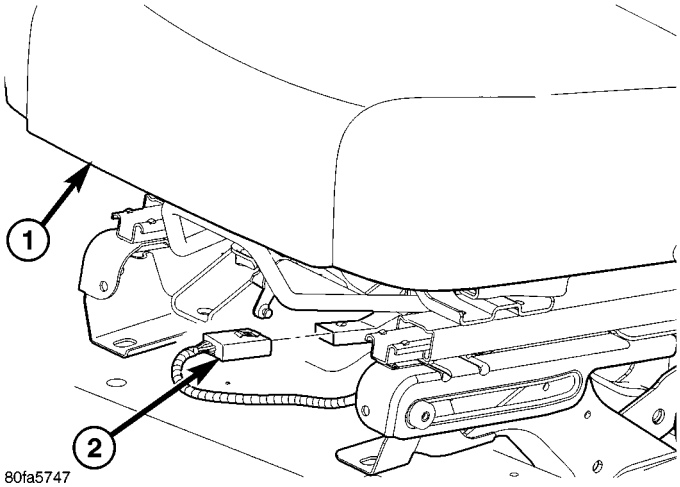

Fig. 1 SEAT BELT ELECTRICAL

1 - FRONT SEAT
2 - SEAT BELT ELECTRICAL CONNECTOR