FRONT SEAT BACK COVER

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ SEAT - REMOVAL)
(2) Disconnect the j-straps at the bottom of the seat back.
(3) Remove the bottom hog rings.
(4) Remove the upper hog rings.
(5) Remove the support rods from the seat back.
(6) Using a trim stick C-4755 or equivalent, remove and discard the seat release handle knob. (Fig. 5)
(7) Remove the screw and remove the release handle bezel.
(8) Remove the seat cover and cushion.

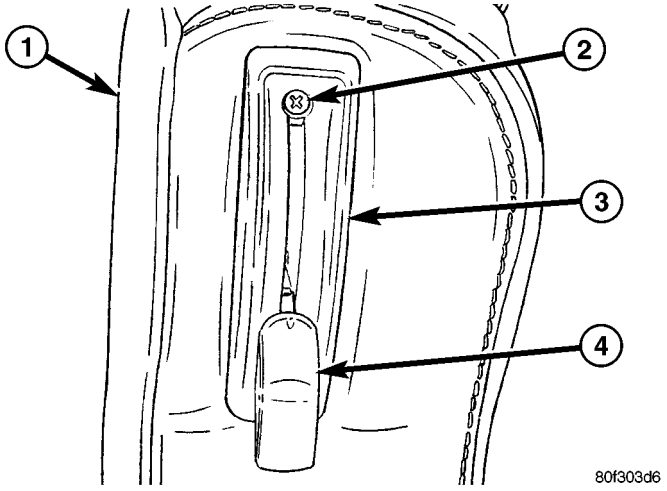

Fig. 5 FORWARD FOLDING SEAT RELEASE HANDLE

1 - SEAT BACK
2 - BEZEL SCREW
3 - RELEASE HANDLE BEZEL
4 - RELEASE HANDLE KNOB

INSTALLATION

(1) Position cover and cushion on seatback.
(2) Install the release handle bezel and install the screw.
(3) Install a new release handle knob.
(4) Install the support rods.
(5) Install the upper hog rings.
(6) Install the bottom hog rings.
(7) Connect the j-straps at the bottom of the seat back.
(8) Install seat back. (Refer to 23 - BODY/SEATS/ FRONT SEAT BACK - INSTALLATION)

FRONT SEAT CUSHION COVER

REMOVAL

(1) Remove seat back. (Refer to 23 - BODY/SEATS/ FRONT SEAT BACK - REMOVAL)
(2) Disengage inboard j-strap.
(3) Disengage front j-strap.
(4) Disengage rear j-strap
(5) Roll cover up to access hog rings.
(6) Disengage inboard and outboard hog rings.
(7) Separate cover from cushion.

INSTALLATION

(1) Position cover on cushion and align seams.
(2) Engage inboard and outboard hog rings.
(3) Roll cover over cushion edges.
(4) Engage inboard j-strap.
(5) Engage front j-strap.
(6) Engage rear j-strap
(7) Install seat back. (Refer to 23 - BODY/SEATS/ FRONT SEAT BACK - INSTALLATION)

FRONT SEAT BACK RECLINER/ COVER

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ FRONT SEAT - REMOVAL)
(2) Disconnect the j-straps at the lower edge of the seat back and position aside.
(3) Disconnect the rear j-straps of the cushion and position aside.
(4) Using a small flat bladed tool, release the recliner cover retaining tab and remove. (Fig. 3)
(5) Disconnect the seat back dump cables. (Fig. 4)
(6) Remove the two seat back bolts.
(7) Remove the two seat cushion frame bolts.
(8) Disconnect the recliner cable.
(9) For the inboard recliner, disconnect the forward folding cable assembly, if equipped.

INSTALLATION

(1) Connect the forward folding cable assembly, if equipped.
(2) Connect the recliner cable.
(3) Install the two seat cushion frame bolts.
(4) Install the two seat back bolts.
(5) Connect the seat back dump cables.
(6) Install the recliner cover.
(7) Connect the rear j-straps of the cushion.
(8) Connect the j-straps at the lower edge of the seat back.
(9) Install the seat. (Refer to 23 - BODY/SEATS/ SEAT - INSTALLATION)