FRONT SEAT FOLDING RELEASE CABLE (Continued)

(3) Remove the inboard recliner. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - REMOVAL)

(4) Disconnect the release cable assembly at the inboard recliner, from the support bracket. (Fig. 9)

(5) Disconnect the cable assembly at the slider and remove. (Fig. 10)

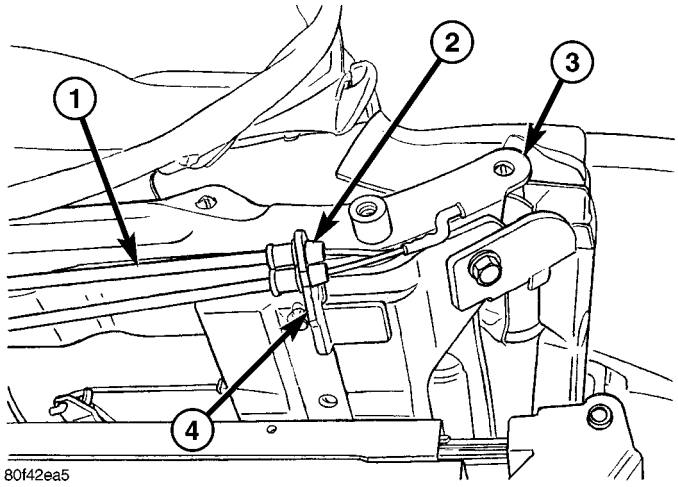

Fig. 9 RELEASE CABLE/RECLINER END

1 - CABLE ASSEMBLY
2 - CABLE HOUSING
3 - SEAT CUSHION FRAME
4 - CABLE SUPPORT BRACKET

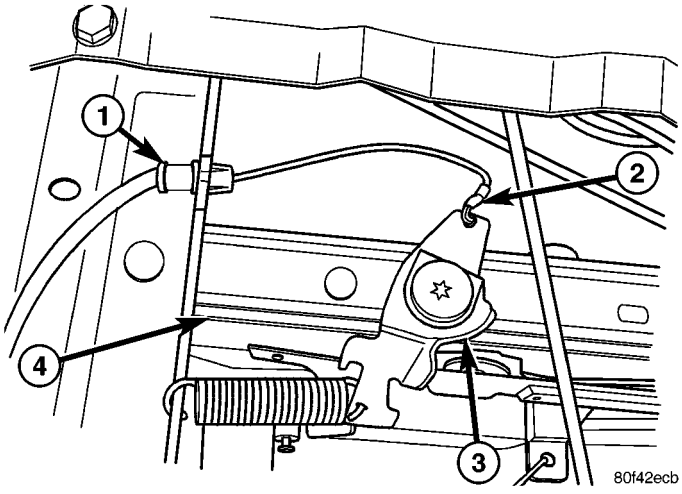

Fig. 10 RELEASE CABLE/SLIDER END

1 - CABLE HOUSING
2 - CABLE END
3 - SLIDER
4 - SEAT CUSHION FRAME

INSTALLATION

(1) Connect the cable assembly at the slider.

(2) Connect the inboard release cable assembly to the support bracket at the recliner.

(3) Install the inboard recliner. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - INSTALLATION)

(4) Connect the folding end of the release cable assembly.

(5) Install the seat. (Refer to 23 - BODY/SEATS/SEAT - INSTALLATION)

FRONT SEAT BACK DUMP CABLE

REMOVAL

(1) Remove the seat back cover. (Refer to 23 - BODY/SEATS/FRONT SEAT BACK COVER - REMOVAL)

(2) Disconnect the dump cables from the recliners. (Fig. 4)

(3) Remove the two dump handle assembly screws and remove the release cable assembly.

INSTALLATION

(1) Install the dump handle assembly and install the two screws.

(2) Connect the dump cables at the recliners.

(3) Install the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - INSTALLATION)