FRONT SEAT TRACK ADJUSTER

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/SEAT - REMOVAL)

(2) Position aside the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - REMOVAL)

(3) Remove the recliner covers. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - REMOVAL)

(4) Position aside the seat cushion cover. (Refer to 23 - BODY/SEATS/SEAT CUSHION COVER - REMOVAL)

(5) Disconnect the recliner cable ends. (Fig. 11) and (Fig. 12)

(6) Remove the seat cushion to hinge bolts. (Fig. 11) and (Fig. 12)

(7) Disconnect the folding release cable from the seat back recliner, if equipped. (Fig. 11)

(8) Remove the seat back assembly.

(9) Remove the two bolts on either side of the seat cushion and remove the seat track assembly. (Fig. 13)

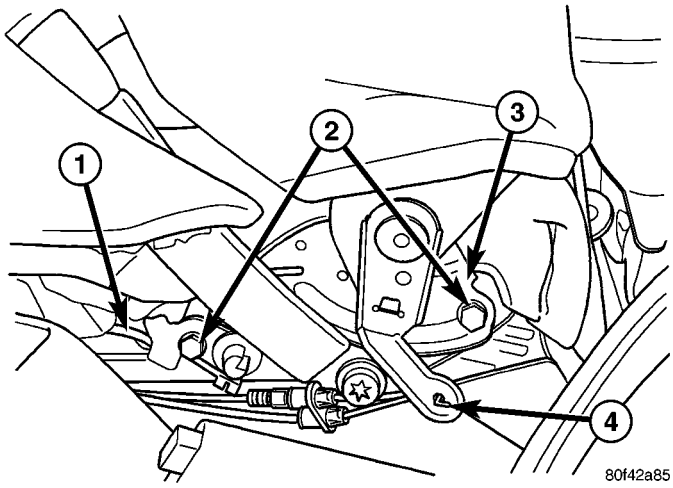

Fig. 11 INBOARD SEAT CUSHION AND HINGE

1 - RECLINER CABLE
2 - SEAT CUSHION FRAME BOLTS
3 - SEAT CUSHION FRAME
4 - FOLDING RELEASE CABLE ASSEMBLY END

INSTALLATION

(1) Install the seat track assembly and install the two front bolts.

(2) Install the seat back assembly.

(3) Connect the folding release cable assembly end to the seat back recliner.

(4) Install the seat back assembly bolts.

(5) Tighten the seat track bolts to 50 N·m (37 ft. lbs.)

(6) Connect the recliner cables.

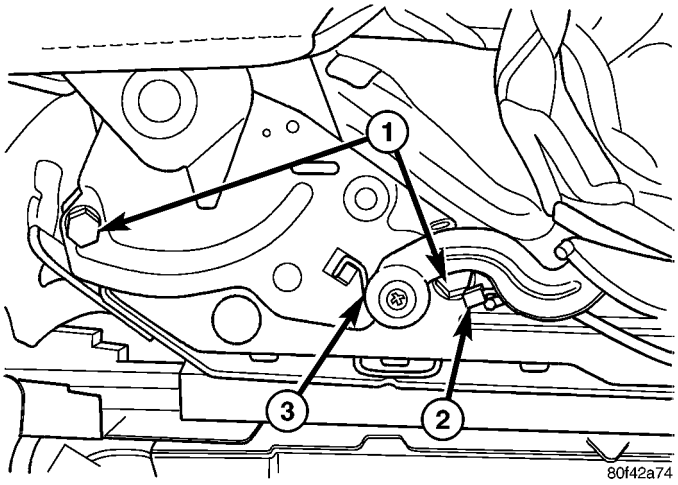

Fig. 12 SEAT CUSHION AND HINGE

1 - SEAT CUSHION FRAME BOLTS
2 - RECLINER CABLE END
3 - RECLINER HANDLE

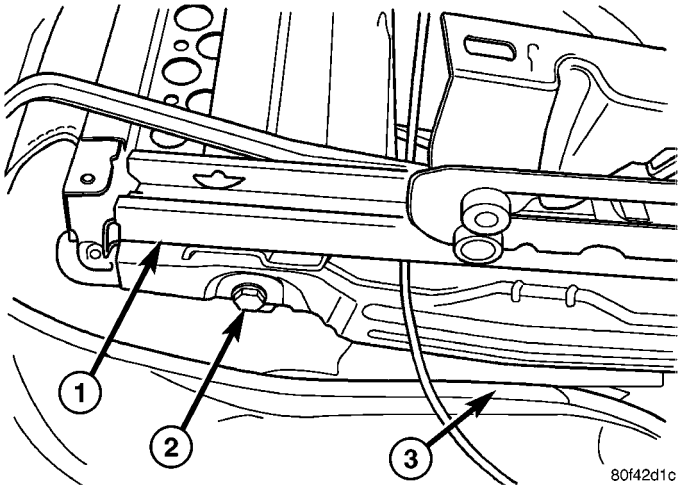

Fig. 13 FRONT SEAT CUSHION BOLTS

1 - SEAT TRACK
2 - SEAT CUSHION FRAME BOLT
3 - SEAT CUSHION

(7) Install the seat cushion cover. (Refer to 23 - BODY/SEATS/SEAT CUSHION COVER - INSTALLATION)

(8) Install the recliner covers. (Refer to 23 - BODY/SEATS/SEAT BACK RECLINER - INSTALLATION)

(9) Install the seat back cover. (Refer to 23 - BODY/SEATS/SEAT BACK COVER - INSTALLATION)

(10) Install the seat. (Refer to 23 - BODY/SEATS/SEAT - INSTALLATION)