REAR SEAT BACK HINGE

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - REMOVAL)
(2) Remove the lower hinge bolts. (Fig. 16)
(3) Disconnect the lower j-straps of the seat back and position aside the seat back cover.
(4) Disconnect the release cable. (Fig. 17)
(5) Remove the bolts and remove the hinge.

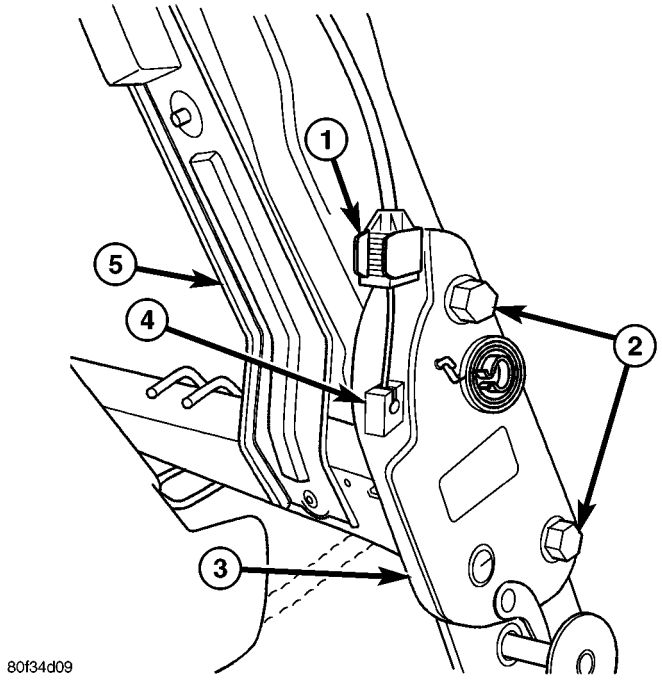

Fig. 17 REAR SEAT BACK HINGE

1 - RELEASE CABLE GUIDE
2 - BOLTS
3 - SEAT BACK HINGE
4 - RELEASE CABLE CONNECTION
5 - SEAT BACK FRAME

INSTALLATION

(1) Install the hinge and install the bolts.
(2) Tighten the bolts to 50 N·m (37 ft. lbs.).
(3) Connect the release cable.
(4) Connect the lower j-straps of the seat back.
(5) Install the lower hinge bolts and tighten to 50 N·m (37 ft. lbs.).
(6) Install the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - INSTALLATION)

REAR SEAT BACK COVER

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ SEAT - REMOVAL)
(2) Remove the screws and remove the seat back release handle bezel. (Fig. 18)
(3) Release the j-clips at the bottom of the seat back and remove the seat cover.
(4) Remove the hog rings and remove the seat cushion. (Fig. 19)

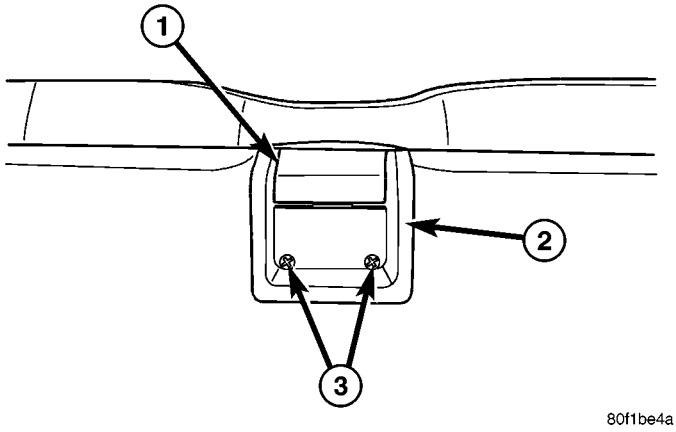

Fig. 18 RELEASE HANDLE

1 - RELEASE HANDLE
2 - BEZEL
3 - SCREWS (2)

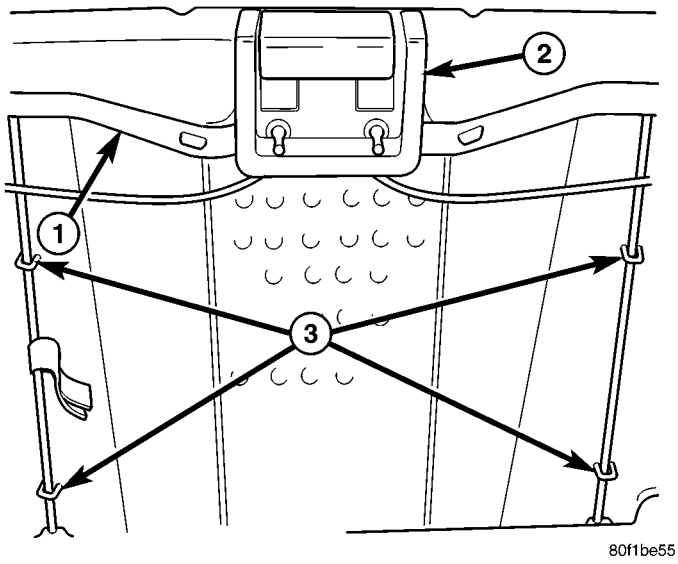

Fig. 19 SEAT BACK CUSHION

1 - SEAT BACK FRAME
2 - SEAT BACK RELEASE HANDLE
3 - HOG RINGS (4)

INSTALLATION

(1) Position the cushion onto the seat back frame and install new hog ring fasteners.
(2) Install the cover over the seat back frame and cushion.