REAR SEAT BACK COVER (Continued)

(3) Connect the bottom j-clips.
(4) Install the release handle bezel and install the screws.
(5) Install the rear seat back. (Refer to 23 - BODY/SEATS/REAR SEAT BACK - INSTALLATION)

REAR SEAT CUSHION COVER

REMOVAL

(1) Remove the rear seat back. (Refer to 23 - BODY/SEATS/REAR SEAT BACK - REMOVAL)
(2) Un-zip the cover. (Fig. 20)
(3) Release the J-clips. (Fig. 21)
(4) Roll the cover from seat cushion and separate from the seat cushion frame.
(5) Remove the hogrings from the foam to cover.

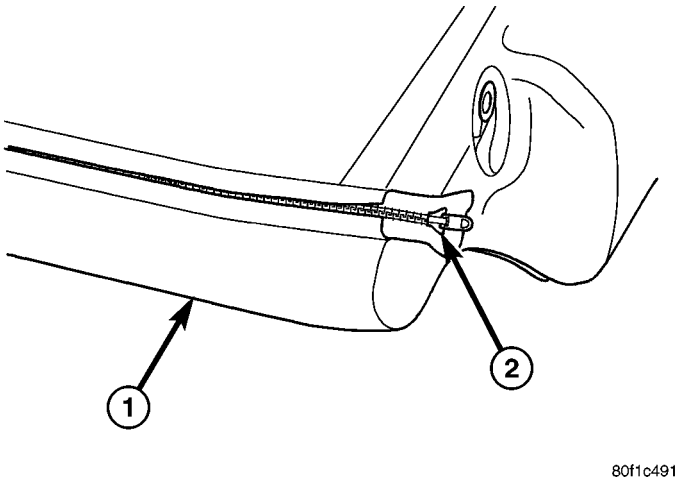

Fig. 20 SEAT CUSHION COVER

1 - SEAT CUSHION
2 - COVER ZIPPER

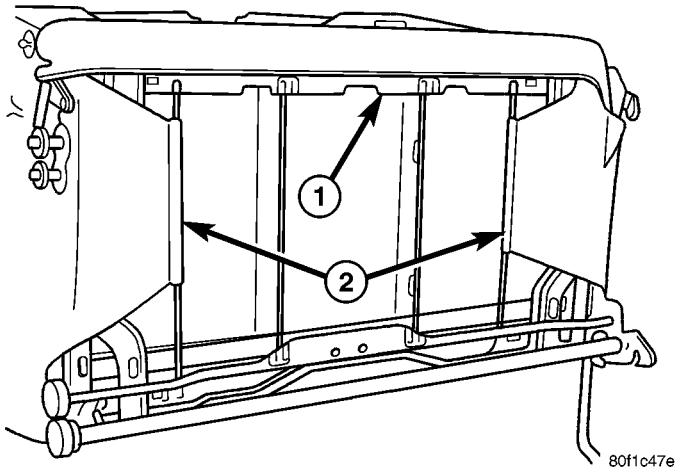

Fig. 21 SEAT CUSHION

1 - SEAT CUSHION FRAME
2 - J-STRAPS

INSTALLATION

(1) Position the cover on the cushion, install new hogrings to foam, and roll cover downward over the corners.
(2) Connect the J-clips to the seat cushion frame.
(3) Close the cover zipper and tuck the zipper ends into the cover.
(4) Install the rear seat back. (Refer to 23 - BODY/SEATS/REAR SEAT BACK - INSTALLATION)

REAR SEAT RELEASE CABLE

REMOVAL

(1) Remove the seat. (Refer to 23 - BODY/SEATS/REAR SEAT - REMOVAL)
(2) Remove the screws and remove the seat back release handle bezel. (Fig. 18)
(3) Release the j-clips at the bottom of the seat back and remove the seat cover.
(4) Disconnect the cables at the seat back hinges. (Fig. 17)
(5) Position the seat back cushion aside and remove the screws. (Fig. 22)
(6) Remove the seat back release cable assembly.

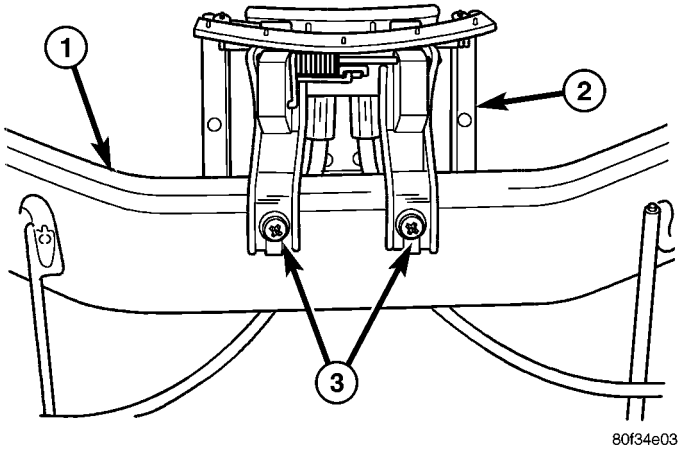

Fig. 22 RELEASE CABLE ASSEMBLY

1 - SEAT BACK FRAME
2 - RELEASE CABLE ASSEMBLY HANDLE
3 - SCREWS

INSTALLATION

(1) Install the seat back release cable assembly and install the screws.
(2) Connect the cables at the seat back hinges.
(3) Install the seat cover and engage the j-clips at the bottom of the seat back.
(4) Install the handle bezel and install the screws.
(5) Install the seat. (Refer to 23 - BODY/SEATS/REAR SEAT - INSTALLATION)