REAR SEAT STRIKERS

REMOVAL

Rear Strikers

(1) Release the seat back and fold seat assembly forward.

(2) Remove the bolts and remove the striker. (Fig. 23)

Front Strikers

(1) Remove the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - REMOVAL)

(2) Remove the bolts and remove the striker. (Fig. 23)

INSTALLATION

Front Strikers

(1) Install the striker and install the bolts.

(2) Tighten the bolts to 61 N·m (45 ft. lbs.).

(3) Install the seat. (Refer to 23 - BODY/SEATS/ REAR SEAT - INSTALLATION)

Rear Strikers

(1) Install the striker and install the bolts.

(2) Tighten the bolts to 61 N·m (45 ft. lbs.).

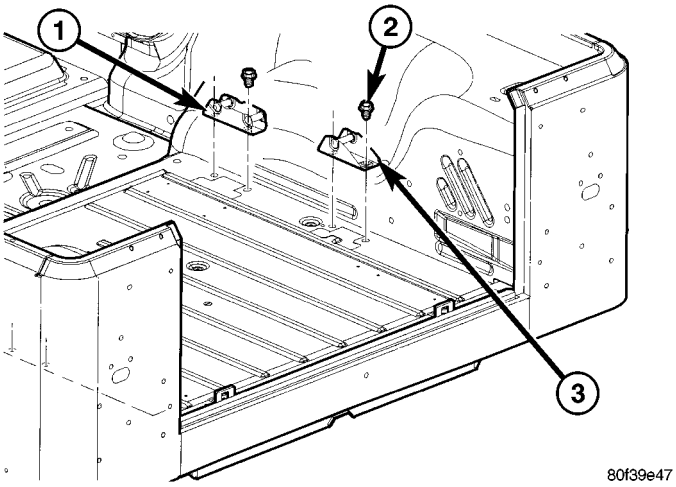

Fig. 23 REAR SEAT STRIKERS

1 - FRONT STRIKER
2 - BOLTS (2 PER STRIKER)
3 - REAR STRIKER

(3) Return the seat to the down position.