WINDSHIELD (Continued)

(18) Install the wiper arms. (Refer to 8 - ELECTRICAL/WIPERS/WASHERS/WIPER ARMS - INSTALLATION)

(19) After urethane has cured, remove tape strips and water test windshield to verify repair.

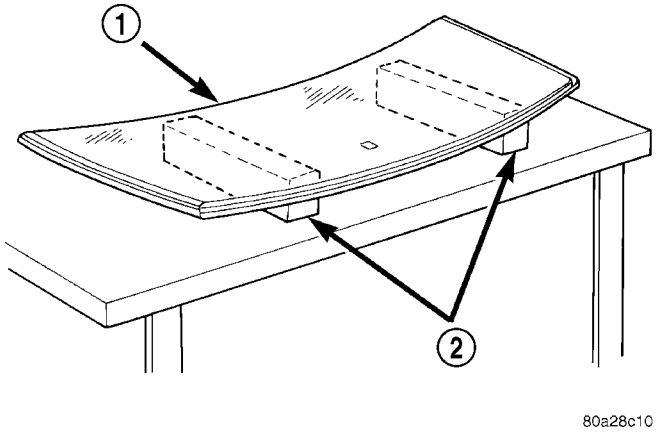

Fig. 3 WORK SURFACE SET UP AND MOLDING INSTALLATION

1 - WINDSHIELD AND MOLDINGS
2 - BLOCKS

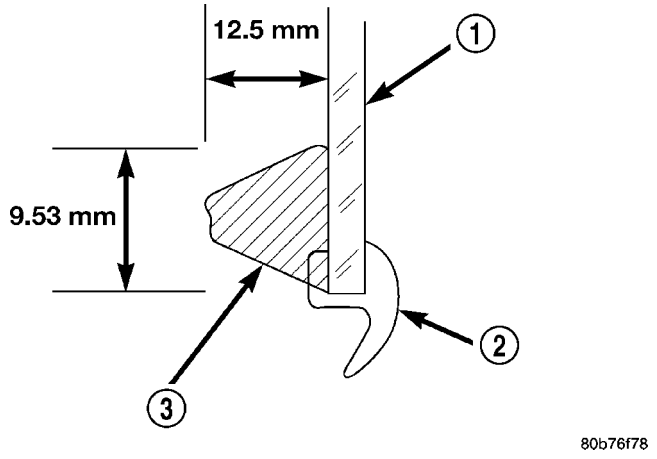

Fig. 4 URETHANE BEAD

1 - WINDSHIELD
2 - MOLDING
3 - URETHANE BEAD

WINDSHIELD HINGE

REMOVAL

NOTE: If both hinges are to be replaced, the windshield must be tilted to the full forward position. (Refer to 23 - BODY/STATIONARY GLASS/WINDSHIELD - REMOVAL)

(1) Remove door. (Refer to 23 - BODY/DOOR - FRONT/DOOR - REMOVAL)

(2) Remove the bolts attaching the hinge to the cowl (Fig. 5).

(3) Remove the bolts attaching the hinge to the windshield frame.

(4) Separate the hinge from the vehicle.

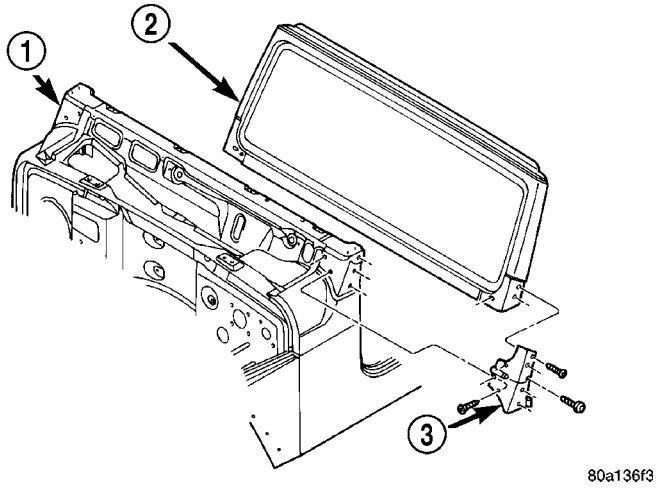

Fig. 5 WINDSHIELD HINGE

1 - COWL
2 - WINDSHIELD
3 - WINDSHIELD HINGE

INSTALLATION

(1) Paint as required.

(2) Clean the contact surface of the hinge and cowl with isopropyl alcohol or equivalent.

(3) Apply a 4 mm bead of Mopar® Vinyl Acrylic Sealant or equivalent around the perimeter of the hinge contact surface. The bead should be 10 mm inboard of the edge.

(4) Position the hinge on the vehicle.

(5) Install the bolts attaching the hinge to the windshield frame.

(6) Install the bolts attaching the hinge to the cowl.

(7) Ensure that the sealant provides complete coverage. Wipe away excess sealant.

(8) Install door. (Refer to 23 - BODY/DOOR - FRONT/DOOR - INSTALLATION)