WEATHERSTRIP/SEALS

TABLE OF CONTENTS

page

HOOD TO COWL WEATHERSTRIP
REMOVAL 86
INSTALLATION 86
FULL DOOR INNER BELT WEATHERSTRIP
DESCRIPTION - FULL DOOR INNER BELT WEATHERSTRIP 86
FULL DOOR OUTER BELT SEAL
REMOVAL 87
INSTALLATION 87
FULL DOOR WEATHERSTRIP
REMOVAL 87
INSTALLATION 87
HALF DOOR WEATHERSTRIP
REMOVAL 88
INSTALLATION 88
TAILGATE WEATHERSTRIP AND CHANNEL
REMOVAL 88
INSTALLATION 88
WINDSHIELD FRAME WEATHERSTRIP
REMOVAL 89
INSTALLATION 89

HOOD TO COWL WEATHERSTRIP

REMOVAL

(1) Carefully separate the weatherstrip from the cowl flange (Fig. 1).

INSTALLATION

(1) Position the weatherstrip on the cowl flange and press it into place.

FULL DOOR INNER BELT WEATHERSTRIP

DESCRIPTION - FULL DOOR INNER BELT WEATHERSTRIP

The inner belt weatherstrip is attached to the door trim panel and is not serviceable. If the inner belt weatherstrip needs to be replaced, replace the door trim panel.

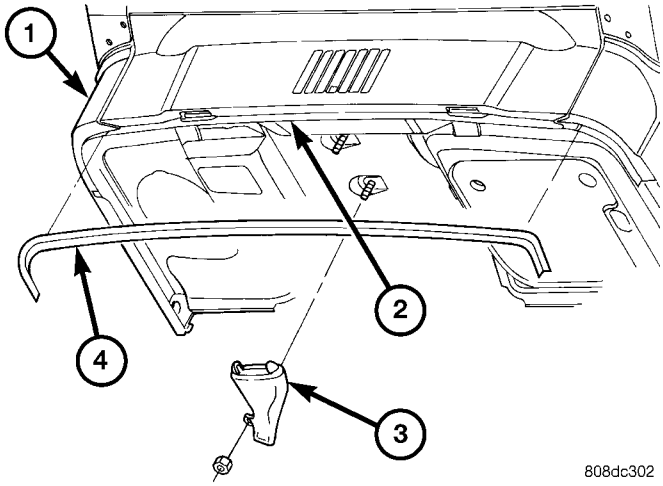

Fig. 1 HOOD TO COWL WEATHERSTRIP

1 - COWL
2 - COWL FLANGE
3 - COWL PLENUM DRAIN
4 - HOOD TO COWL WEATHERSTRIP