HEATING & AIR CONDITIONING

TABLE OF CONTENTS

page

HEATING & AIR CONDITIONING
DESCRIPTION 1
OPERATION 2
DIAGNOSIS AND TESTING
A/C PERFORMANCE 3
HEATER PERFORMANCE 7
SPECIFICATIONS
HEATING-A/C SYSTEM 8
CONTROLS 10
DISTRIBUTION 37
PLUMBING 57

HEATING & AIR CONDITIONING

DESCRIPTION

A manually controlled single zone type heating-air conditioning system or a manually controlled heater-only system is available on this model (depending on market).

To maintain the performance level of the heating, ventilation and air conditioning (HVAC) system, the engine cooling system must be properly maintained. The use of a bug screen is not recommended. Any obstructions in front of the radiator or A/C condenser will reduce the performance of the A/C and engine cooling systems.

The engine cooling system includes the radiator, thermostat, radiator hoses and the engine coolant pump. Refer to 7 - Cooling for more information before opening or attempting any service to the engine cooling system.

All vehicles are equipped with a common heater, ventilation and air conditioning (HVAC) housing (Fig. 1). The system combines air conditioning, heating and ventilation capabilities in a single unit mounted within the passenger compartment under the instrument panel. The HVAC housing includes:

- Blower motor
- Blower motor relay
- Blower motor resistor
- Recirculation-air door and actuator (A/C system only)
- Heater core
- A/C evaporator (A/C system only)
- Blend-air door and actuator
- Floor/defrost and panel-air doors and actuators

On heater-only systems, the A/C evaporator and recirculation-air door are omitted from the housing.

Based upon the system and mode selected, conditioned air can exit the heater-only or heater-A/C HVAC housing through one or a combination of the three main housing outlets: defrost, panel or floor.

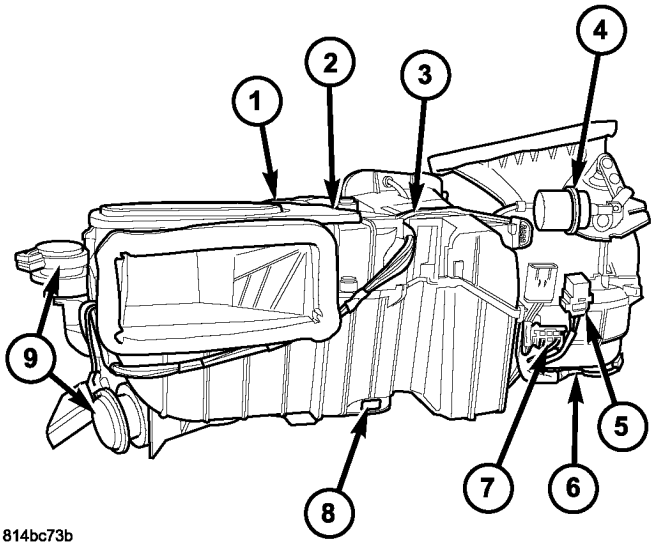

Fig. 1 HVAC Housing - LHD shown, RHD similar

1 - HVAC HOUSING
2 - HEATER CORE
3 - A/C EVAPORATOR
4 - RECIRCULATION DOOR ACTUATOR
5 - BLOWER MOTOR RELAY
6 - BLOWER MOTOR
7 - BLOWER MOTOR RESISTOR
8 - BLEND DOOR ACTUATOR
9 - MODE DOOR ACTUATORS

The defrost outlet is located on the top of the housing, the panel outlet is located on the face of the housing and the floor outlet is located on the bottom of the housing. Once the conditioned air exits the HVAC housing, it is further directed through molded plastic ducts to the various outlets within the vehicle interior. These outlets and their locations are as follows:

- **Defroster Outlet** - A single large defroster outlet is located in the center of the instrument panel top cover, near the base of the windshield.
- **Side Window Demister Outlets** - There are two side window demister outlets, one is located at