HEATING & AIR CONDITIONING (Continued)

(1) Connect a tachometer and a manifold gauge set or an A/C recycling/charging station.

(2) Set the mode control to the Recirculation mode, the temperature control to the full cool position, and the blower fan to the highest speed position.

(3) Start the engine and hold at 1,000 rpm with the A/C clutch engaged.

(4) The engine should be warmed up to operating temperature with the doors closed and windows open.

(5) Insert a thermometer in the driver side center panel air outlet and operate the engine for five minutes.

(6) The A/C clutch may cycle, depending upon the ambient temperature and humidity. If the A/C clutch cycles, unplug the wire harness connector from the A/C low pressure switch located on the accumulator (Fig. 3), then place a jumper wire across the terminals of the wire harness connector for the switch.

(7) With the A/C clutch engaged, record the air outlet discharge temperature, the discharge pressure (high side service port) and the suction pressure (low side service port). Compare the air temperature at the center panel outlet and the A/C compressor discharge pressure (high side) to the A/C Performance Temperature and Pressure chart.

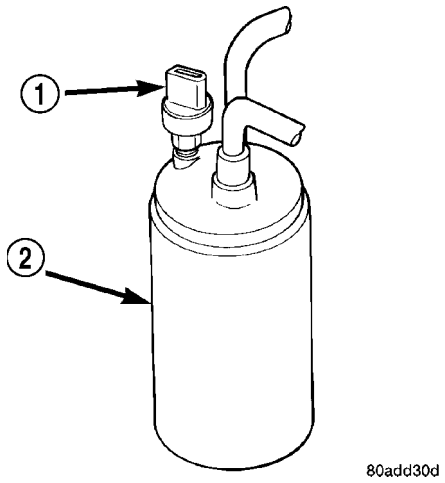

Fig. 3 A/C Low Pressure Switch - Typical

1 - A/C LOW PRESSURE SWITCH
2 - ACCUMULATOR

A/C PERFORMANCE TEMPERATURE AND PRESSURE

Ambient Air Temperature	21° C (70° F)	27° C (80° F)	32° C (90° F)	38° C (100° F)	43° C (110° F)
Air Temperature at Center Panel Outlet	-3 to 3° C (27 to 38° F)	1 to 7° C (33 to 44° F)	3 to 9° C (37 to 48° F)	6 to 13° C (43 to 55° F)	10 to 18° C (50 to 64° F)
Evaporator Inlet Pressure at Charge Port	179 to 241 kPa (26 to 35 psi)	221 to 283 kPa (32 to 41 psi)	262 to 324 kPa (38 to 47 psi)	303 to 365 kPa (44 to 53 psi)	345 to 414 kPa (50 to 60 psi)
Compressor Discharge Pressure	1240 to 1655 kPa (180 to 240 psi)	1380 to 1790 kPa (200 to 260 psi)	1720 to 2070 kPa (250 to 300 psi)	1860 to 2345 kPa (270 to 340 psi)	2070 to 2690 kPa (300 to 390 psi)

(8) If the air outlet temperature fails to meet the specifications in the A/C Performance Temperature and Pressure chart, or if the A/C compressor discharge pressure is high, refer to the A/C Pressure Diagnosis chart.