A/C COMPRESSOR CLUTCH (Continued)

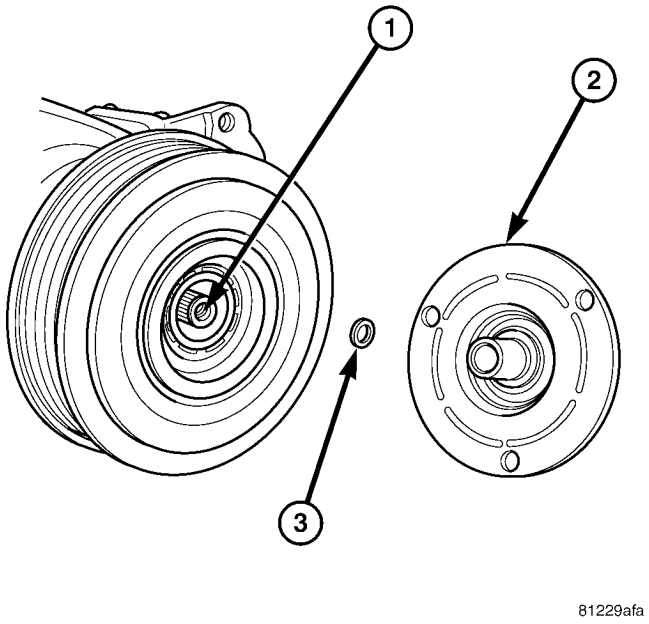



***Fig. 3 Clutch Plate and Shim(s)***

1 - A/C COMPRESSOR SHAFT
2 - CLUTCH PLATE
3 - SHIM

(3) Remove the bolt that secures the compressor clutch to the compressor shaft (Fig. 4). A band-type oil filter wrench may be used to secure the clutch during bolt removal.

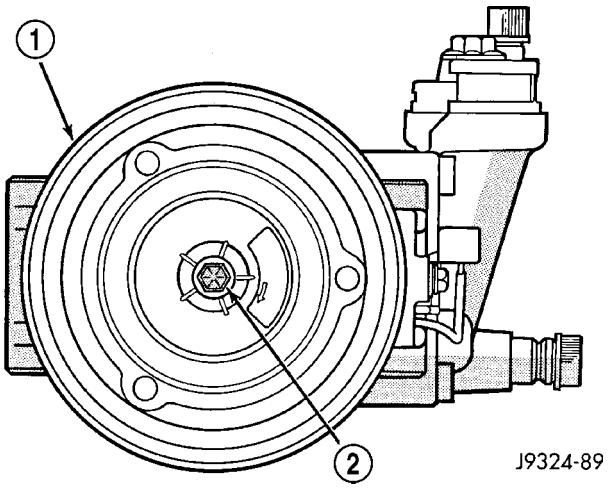



***Fig. 4 A/C Compressor Shaft Bolt***

1 - COMPRESSOR CLUTCH PLATE
2 - COMPRESSOR SHAFT BOLT

(4) Tap the clutch plate with a plastic mallet to release it from the splines on the compressor shaft. Remove the clutch plate and shim(s) from the compressor shaft (Fig. 5).

**NOTE: Use care not to lose any of the shim(s).**

**CAUTION: Do not use screwdrivers between the clutch plate assembly and pulley to remove front plate as this may damage the front plate assembly.**

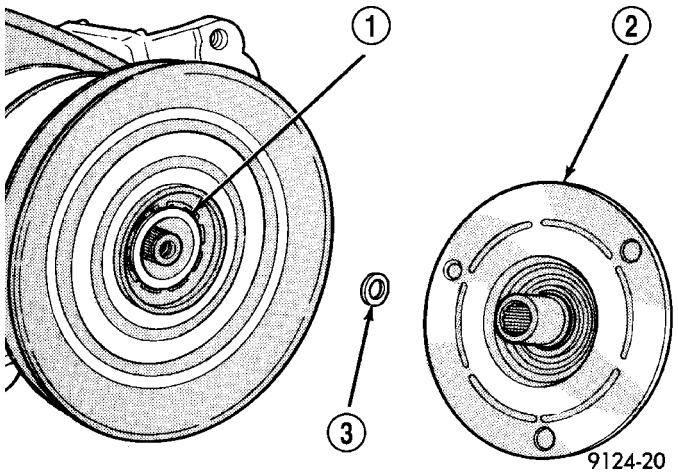



***Fig. 5 Clutch Plate and Shim(s)***

1 - COMPRESSOR SHAFT
2 - CLUTCH PLATE
3 - CLUTCH PLATE SHIM

(5) Remove the external snap ring that secures the compressor clutch pulley to the nose of the compressor front housing with snap ring pliers (Special Tool C-4574) or equivalent and slide the pulley assembly off of the compressor (Fig. 6).

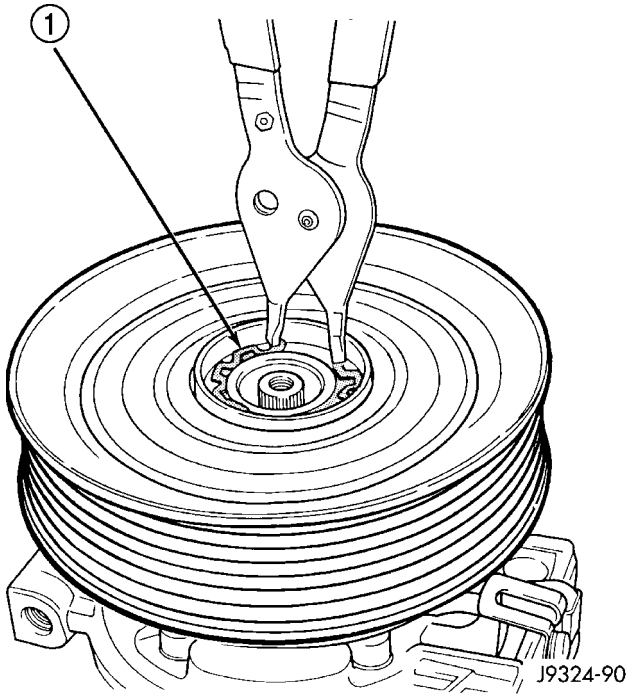



***Fig. 6 Pulley Snap Ring***

1 - SNAP RING