A/C CLUTCH RELAY (Continued)

REMOVAL

(1) Disconnect and isolate the battery negative cable.

(2) Remove the cover from the power distribution center (PDC) (Fig. 10) located in the engine compartment.

NOTE: Refer to the fuse and relay layout map on the inside of the PDC cover for A/C clutch relay location.

(3) Remove the A/C clutch relay from the PDC.

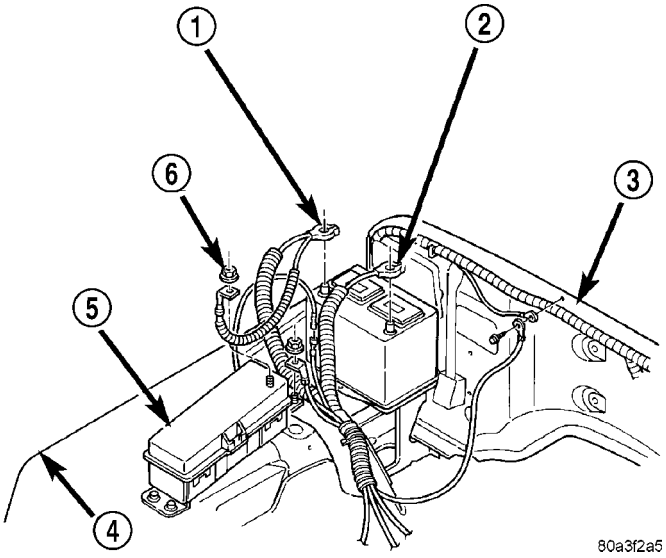

Fig. 10 Power Distribution Center - LHD shown, RHD similar

1 - BATTERY POSITIVE CABLE
2 - BATTERY NEGATIVE CABLE
3 - DASH PANEL
4 - INNER FENDER
5 - POWER DISTRIBUTION CENTER (PDC)
6 - NUT

INSTALLATION

NOTE: Refer to the fuse and relay layout map on the inside of the power distribution center (PDC) cover for A/C clutch relay location.

(1) Position the A/C clutch relay into the receptacle of the PDC.

(2) Align the A/C clutch relay terminals with the terminal cavities in the PDC receptacle and push down firmly on the relay until the terminals are fully seated.

(3) Close the cover of the PDC.

(4) Reconnect the negative battery cable.

A/C HEATER CONTROL

DESCRIPTION

The A/C-heater control (Fig. 11) for both the manual temperature control (MTC) single zone heating-only and the heating-A/C system allows one temperature setting for the entire vehicle. All controls are identified by ISO graphic symbols.

The A/C-heater control is located in the instrument panel and contains:

- a rotary control knob for blower fan speed selection.
- a rotary control knob for recirculation and mode control of the discharged air.
- a rotary control knob for temperature control of the discharged air and turning the heating-A/C system off.

The A/C-heater control cannot be repaired and, if faulty or damaged, it must be replaced. The blower motor and mode control switch, control knobs and illumination lamps are available for service replacement.

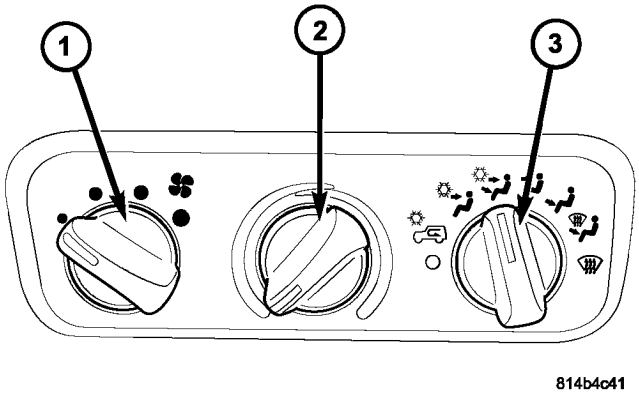

Fig. 11 A/C-Heater Control - Typical

1 - BLOWER SPEED CONTROL
2 - TEMPERATURE SELECT COPNTROL
3 - MODE SELECT CONTROL