A/C HEATER CONTROL (Continued)

REMOVAL

WARNING: On vehicles equipped with airbags, disable the airbag system before attempting any steering wheel, steering column, or instrument panel component diagnosis or service. Disconnect and isolate the negative battery (ground) cable, then wait two minutes for the airbag system capacitor to discharge before performing further diagnosis or service. This is the only sure way to disable the airbag system. Failure to take the proper precautions could result in accidental airbag deployment and possible personal injury or death.

(1) Disconnect and isolate the battery negative cable.

(2) Remove the center bezel from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/ INSTRUMENT PANEL CENTER BEZEL - REMOVAL).

(3) Remove the glove box from the instrument panel (Refer to 23 - BODY/INSTRUMENT PANEL/ GLOVE BOX - REMOVAL).

(4) Reach through the glove box opening and disconnect the two halves of the A/C-heater control vacuum harness connector (Fig. 16).

(5) Remove the two screws that secure the A/C-heater control to the instrument panel.

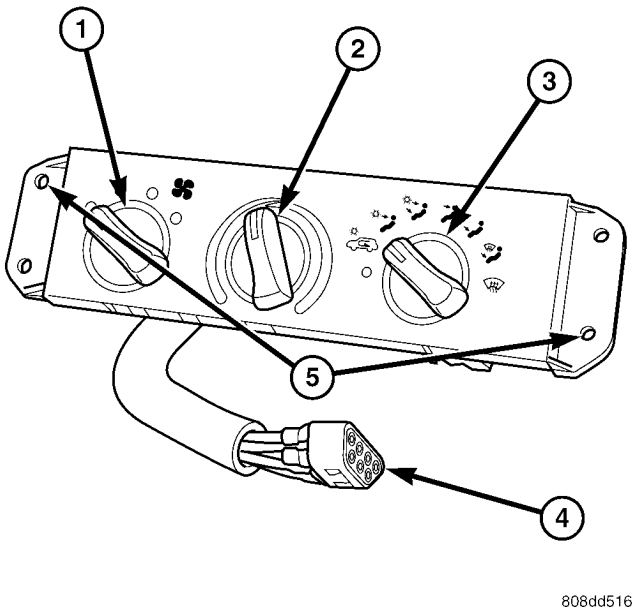

Fig. 16 A/C-Heater Control - Typical

1 - BLOWER MOTOR CONTROL
2 - TEMPERATURE CONTROL
3 - MODE CONTROL
4 - VACUUM HARNESS CONNECTOR
5 - MOUNTING SCREW LOCATIONS

(6) Pull the A/C-heater control away from the instrument panel to access the connections on the back of the control.

(7) Disconnect the three wire harness connectors from the back of the A/C-heater control (Fig. 17) and remove the control from the vehicle.

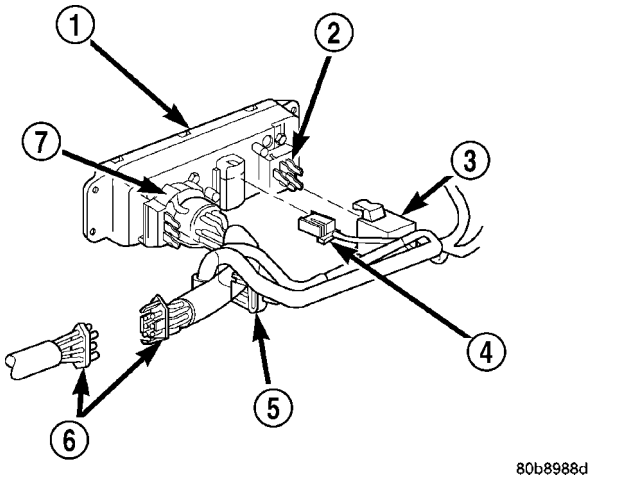

Fig. 17 A/C-Heater Control Connections - Typical

1 - A/C-HEATER CONTROL
2 - BLOWER MOTOR SWITCH
3 - BLOWER MOTOR SWITCH CONNECTOR
4 - TEMPERATURE/ILLUMINATION CONNECTOR
5 - MODE SWITCH CONNECTOR
6 - VACUUM HARNESS
7 - MODE SWITCH

INSTALLATION

(1) Connect the three wire harness connectors to the back of the A/C-heater control.

(2) Position the A/C-heater control onto the instrument panel and install the two retaining screws. Tighten the screws to 2 N·m (17 in. lbs.).

(3) Reach through the glove box opening and connect the A/C-heater vacuum harness connector.

(4) Install the glove box (Refer to 23 - BODY/INSTRUMENT PANEL/GLOVE BOX - INSTALLATION).

(5) Install the center bezel (Refer to 23 - BODY/ INSTRUMENT PANEL/INSTRUMENT PANEL CENTER BEZEL - INSTALLATION).

(6) Reconnect the negative battery cable.

A/C HIGH PRESSURE SWITCH

DESCRIPTION

The A/C high pressure switch controls A/C compressor clutch engagement and disengagement when equipped with the 4.0L engine. The A/C high pressure switch is mounted on a fitting located on the A/C discharge line near the A/C compressor. The A/C high pressure switch turns off the A/C compressor if